

INDEX

- 1450 MHz IF 1-5, 3-22
 - Output Level 1-5
- 2 GHz Fixed LO 4-12, 5-21, 5-38
 - Contribution to 523 - 533 MHz Mixing Loop 4-40
 - Description 4-38
- 21.4 MHz Fixed LO 4-20, 5-22
 - Description 4-44
- 21.4 MHz IF 1-5
 - Block Diagram 4-14
 - Connections to Video Module 4-27
 - Conversion by Low Frequency RF Module 4-8
 - Conversion by Microwave RF Module 4-13
 - Description 4-13
 - Impulse Response 1-5
 - Noise Filter 4-15
 - Output Level 1-5
 - Overload Indication 3-17
 - Selectivity 1-5
- 21.4 MHz IF Amplifier Module 4-46, 5-15, 5-20, 6-4, 6-12, 6-15
 - Address Map 4-16, B-5
 - AGC 5-23
 - AGC Adjustment Procedure 5-34
 - Connection to Low Frequency RF Module 4-10
 - Connection to Microwave RF Module 4-13
 - Control Interface 5-20
 - Control Source For 21.4 MHz IF Filter Module 4-17, 4-19
 - Control Source For Low Frequency RF Module 4-10, 4-17
 - Control Source For Microwave RF Module 4-12, 4-17
 - Description 4-13
 - Fault Isolation 5-21, 5-22
 - Field Service Adjustments 5-32
 - Front End Overload and Underload Threshold Adjustment Procedure 5-33
 - Overload and Underload for Autorange 5-23
- 21.4 MHz IF Filter Module 4-46, 5-15, 5-20, 5-23, 6-5, 6-12, 6-15
 - Back End IF Overload Threshold Adjustment Procedure 5-34
 - Control Interface 5-20
 - Description 4-17
 - Fault Isolation 5-22
 - Field Service Adjustments 5-32
- 21.4 MHz IF Output 3-7, 3-16, 5-23
 - Connection to 21.4 MHz IF Amplifier Module 4-13, 4-15
 - Connector 2-4, 3-5, 3-7, 4-13, 4-15
 - Level 1-5
- 3 MHz Fixed LO 4-8, 5-21
 - Description 4-44
- 523 - 533 MHz Mixer Loop 4-13, 5-21
 - Description 4-40
 - VCO Clamp Threshold Adjustment Procedure 5-38
- 550 MHz IF 4-12

- Absolute Gain Display Mode 3-12, 3-17, 5-6
 - Chart 3-33
 - Indicator 3-3, 3-8, 3-12, 3-22, 5-6
 - Selection 3-8
- AC High Indicator 3-3, 3-10, 3-17, 4-64, 5-6, 5-8, 5-19
- AC Input Module 5-16
- AC Low Indicator 3-3, 3-10, 3-17, 4-64, 5-6, 5-8, 5-19
- AC Power
 - AC Input Module 5-16
 - Connection 2-5
 - Connector 2-4, 3-5, 4-64, 4-67, 5-30
 - Description 4-64
 - EMI Filters 4-64, 4-67
 - Line Cord 1-6, 1-7, 2-5, 2-6, 5-24
 - Line Voltage Range Selection 1-6, 2-5
 - Power Switch 3-3, 3-7, 3-28, 4-67, 4-70, 5-28, 6-10, 6-12
 - Power Transformer 4-64, 4-67
 - Protection from Line Voltage 1-6
 - Range Selection 5-8
 - Receptacle Grounding 2-6
 - Settings 2-5
 - Subrange Switch 5-8
 - Transformer 6-10
 - Voltage Range Indicators 3-17
 - Voltage Range Switch 2-5, 3-5, 3-7, 3-10, 4-64, 4-67, 5-19, 5-31
 - Voltage Subrange Switch 2-5, 3-5, 3-10, 3-17, 4-64, 4-67, 5-19, 5-31
- Acceptance Test Procedure 5-1, 5-32
- Accessories
 - Optional 1-7
 - Required, Not Supplied 1-7
 - Shipping Package 2-1
 - Supplied 1-7
- Address Maps
 - 21.4 MHz IF Amplifier Module 4-16
 - Code B-2
 - Data B-2
 - DCIF Module 4-25
 - Fixed LO Synthesizer Module 4-45
 - I/O Bus B-2
 - Low Frequency Synthesizer Module 4-44
 - Microwave Synthesizer Module 4-40
 - Processor PCB 4-61
 - Redundant Addresses B-2
 - Unused Addresses B-13
 - Video Module 4-32

- AGC 1-5, 3-12, 5-6, 5-22
 - Adjustment Procedure 5-34
 - Control of Attenuators in 21.4 MHz IF 4-15
 - Default 3-6
 - Effect On Gain Display Selection 3-22
 - Fault Isolation 5-23
 - Gain Display 3-23
 - Indicator 3-3, 3-8, 3-12, 3-23, 5-6
 - Performance Test 5-12
 - Selection 3-8, 3-23, 3-33
 - Signal Source in Video Module 4-27, 4-30
- AGC Mode 3-18, 3-19
 - AGC Selection 3-33
 - Autorange Selection 3-33
 - Chart 3-33
 - Description 3-23
- Air Filter 5-2
- Alternate Functions 3-17
 - Absolute Gain Display Mode 3-3, 3-8, 3-22, 5-6
 - AGC 3-3, 3-6, 3-8, 3-12, 3-23, 3-33, 4-15, 4-27, 4-30, 5-6, 5-12, 5-23, 5-34
 - Audio Beep Volume Adjustment 5-7
 - Autorange 3-3, 3-6, 3-8, 3-11, 3-23, 3-27, 3-33, 5-6, 5-12, 5-23
 - CW Gain Distribution 3-3, 3-8, 3-22, 5-6
 - Delta Gain Display Mode 3-3, 3-8, 3-22, 5-6
 - Display Brightness Adjustment 5-8
 - Extended Bandwidth Mode 3-8
 - External Wideband Mode 3-3, 3-8, 3-13, 3-23, 4-1, 4-12, 5-6
 - Front Panel Beep Volume Adjustment 5-7
 - Indicator 3-19, 3-20, 3-21, 3-22, 3-23, 3-24, 3-26, 3-27, 3-29, 3-30, 5-6
 - Keypad Access Chart 3-18
 - Keypad Modes With Indicators 3-19
 - MDC Mode 3-8, 3-27, 3-34, 4-51, 4-60
 - Pushbutton 3-3, 3-8, 3-9, 3-10, 3-19, 3-20, 3-21, 3-22, 3-23, 3-24, 3-26, 3-27, 3-28, 3-29, 3-30, 5-6
 - Ramped Tuning 3-8, 3-14
- AM Slideback
 - Threshold Indicator 5-6
- Analog Computation Unit 4-24
- ATP 5-1, 5-32
- Audible Indicators 3-11
 - For Frequency Tuning Limits 3-19
 - For IF Bandwidth Limits 3-13
 - For IF Gain Limits 3-12
 - For RF Input Attenuation Limits 3-11
 - Front Panel 4-53
 - In Audio Output 4-33
 - In Remote Mode 3-29
 - Selection and Adjustment 3-26
 - Signal Source 4-57

- Audio Beep 3-11, 3-15, 3-26, 4-33, 4-57
 - Chart 3-34
 - Default 3-6
 - Fault Isolation 5-16
 - Level Adjustment 3-9
 - Volume Adjustment 5-7, 5-17
- Audio Output 3-7, 3-15, 5-16
 - Amplifier 4-33
 - Audible Indicator 3-26, 4-57
 - BFO 5-36
 - Connector 2-4, 3-3, 3-7, 3-9, 3-15, 5-12, 6-10, 6-12
 - Fault Isolation 5-17
 - Frequency Response 1-6
 - Level 1-6
 - Performance Test 5-12
 - Signal Source in Video Module 4-30
 - Volume Control 3-3, 3-7, 3-15, 3-28, 5-17, 5-28, 6-10, 6-12
 - With BFO 3-15
- Automated System Controller 1-7
- Automatic Gain Control 3-23
- Autorange 3-11, 5-6
 - Default 3-6
 - Fault Isolation 5-23
 - In MDC Mode 3-12, 3-27
 - In Remote Mode 3-11
 - Indicator 3-3, 3-8, 3-11, 3-23, 5-6
 - Performance Test 5-12
 - Selection 3-8, 3-23, 3-33
- Back End Overload 4-50
 - Detection in 21.4 MHz IF 4-17, 5-11
 - Detection in DCIF Module 4-24, 5-11
 - Detection in Video Module 4-26, 4-33, 5-11
 - Indicator 3-3, 3-10, 3-17, 5-6, 5-11
- Back Orders 2-1
- Backplane 5-25
 - Connector Pin Assignments 4-47
 - Connector Usage 4-46
 - Control Bus 4-56
 - Dedicated Connector Pins 4-49
 - Description 4-45
 - Discrete Status Lines 5-21
 - Interface to Front Panel 4-69
 - Removal and Replacement 5-26
 - Status Line Usage 4-50
- Band 3 Input Limiter 6-3
- Band Switching Settling Time 1-4
- Bandwidth Gap Indicator 3-3, 3-10, 3-14, 3-17, 5-6
- Bandwidth Limit Indicator 3-3, 3-10, 3-14, 3-17, 5-6

- Bandwidth Mode 3-18, 3-19
 - Chart 3-33
 - Default 3-6
 - Description 3-22
 - Extended Mode Selection 3-33
 - External Wideband Mode Selection 3-33
 - Selection 3-8
- Beep Mode 3-18, 3-19
 - Chart 3-34
 - Default 3-6
 - Description 3-26
 - Selection 3-9
- Beep Triggers
 - Errors 3-26
 - Faults 3-26
 - Limits 3-26
- Bench Operation 2-3
- BFO 3-7, 3-15, 4-26
 - Adjustment Procedure 5-36
 - Default 3-6
 - Default Gain Distribution 3-22
 - Description 4-30
 - Effect On Gain Distribution Selection 3-22
 - Fault Isolation 5-23
 - In the Audio Output 3-15
 - Indicator 5-5
 - Performance Test 5-12
 - Pushbutton 3-3, 3-7, 5-5
 - Tuning Control Knob 3-3, 3-7, 3-28, 4-30, 5-28, 6-10, 6-12
 - Tuning Range 1-6
 - Tuning Resolution 1-6
- Brightness Mode 3-18, 3-19
 - Chart 3-33
 - Description 3-26
- Cable Requirements 2-3
- Cables
 - Flexible Coax 4-2, 4-69, 4-71, 6-1, 6-10, 6-11, 6-12, 6-13
 - Inspect 5-2
 - Microwave RF Module 4-69, 6-1
 - Ribbon 4-69
 - Semi-Rigid Coax 4-2, 4-69, 4-71, 6-1, 6-8, 6-11, 6-13
- Cardcage 4-2, 4-61, 5-24, 5-25, 6-1, 6-8, 6-11, 6-15
 - Assembly 6-1, 6-11
 - Backplane 4-45, 4-56, 4-69, 5-20, 5-26, 6-1, 6-8, 6-11, 6-15
 - Feed-Through Capacitors 5-26
 - Interface to Front Panel 5-20
 - Modules With Control Interface 5-20
 - Reset 4-57
- Catastrophic Failures 5-23
- Clapp Oscillator 4-30

- Coax Cables 4-71
 - Flexible 4-69
 - Semi-Rigid 4-69
- Code Address Map B-2
- Color Coding 4-71, 5-18, 5-27
- Condensed Operating Instructions 3-7
- Configuration Jumpers B-1
- Connecting Cables 2-3
- Connector Mating 1-1
- Connectors 3-1
 - 20 MHz Reference Monitor 5-31
 - 21.4 MHz IF Output 2-4, 3-5, 3-7, 3-16, 4-13
 - AC Power 2-4, 3-5, 4-64, 4-67, 5-30
 - Audio Output 2-4, 3-3, 3-7, 3-9, 3-15, 4-33, 5-12, 5-28, 6-10, 6-12
 - DC Power 4-70
 - External Wideband 4-12
 - Identification 2-4
 - IEEE-488 Interface 2-4, 2-7, 3-5, 4-61, 4-69, 5-30
 - Reference Oscillator Output 2-4, 3-5, 3-16, 4-38, 5-8
 - RF Inputs 2-4, 3-3, 3-11, 4-8, 5-28
 - RS-232 Interface 2-9
 - Signal Monitor Output 2-4, 3-5, 3-7, 3-16, 4-13, 5-12
 - Status/Control Output 2-4, 2-10, 3-5, 4-64, 4-69
 - Video Output 2-4, 3-3, 3-7, 3-15, 4-30, 5-28
 - X Axis Output 2-4, 3-3, 3-16, 4-58, 5-7, 5-28
 - Z Axis Output 2-4, 3-5, 3-7, 3-16, 4-31, 5-12
- Continue After Scan Pause
 - Chart 3-31
 - Selection 3-9
- Control Knobs 3-1, 5-16, 6-10
 - Audio Output Volume 3-3, 3-7, 3-15, 3-28, 4-33, 6-10, 6-12
 - BFO Tuning 3-3, 3-7, 3-15, 3-28, 4-30, 5-28, 6-10, 6-12
 - Frequency Tuning 3-1, 3-3, 3-7, 3-8, 3-9, 3-10, 3-13, 3-17, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 4-1, 4-51, 4-54, 5-5, 5-7, 5-28, 6-8, 6-12
 - IF Gain 3-3, 3-7, 3-12, 4-51, 4-54, 5-5, 5-9, 5-22, 5-28, 6-8, 6-12
 - Z Axis Output Level 1-6, 3-3, 3-7, 3-16, 3-28, 4-31, 5-28, 6-10, 6-12
- Control Section
 - Block Diagram 4-52
 - Control of Front Panel RF Components 4-8
 - Description 4-51
 - Interface to Cardcage Backplane 4-46
- Counter-Timer IC B-4
- Cover 4-2, 5-24, 6-11
- Crystal Filter 4-10
- CW Gain Distribution 3-12, 3-15, 3-22, 5-6
 - Indicator 3-3, 3-8, 3-12, 3-22, 5-6
 - Selection 3-8, 3-33
- Data Address Map B-2
- Data Addresses B-1
- DC Regulation Indicator 3-3, 3-10, 3-17, 4-64, 5-6, 5-19

DCIF

- Fixed Gain Command and Query A-14

- Overload Indication 3-17

DCIF Filter Clock Synthesizer 4-23, 5-22

- Description 4-44

DCIF Module 4-46, 5-15, 5-23, 5-34, 6-7, 6-12, 6-15

- Address Map 4-25, B-4

- Block Diagram 4-21

- Connection to 21.4 MHz IF Amplifier Module 4-13, 4-15

- Connection to 21.4 MHz IF Filter Module 4-13, 4-17, 4-19

- Connection to Video Module 4-27

- Control Interface 5-20

- Description 4-19

- Dynamic Range 4-24

- Fault Isolation 5-22

- Field Service Adjustments 5-32

- Filter Types 4-22

- Gain Control 4-23

- Offset Adjustment Procedure 5-35

- Performance Test 5-9

- Source of Filter Clock and LO 4-44

DDS 4-2, 4-41, B-3

Default Settings 3-5, 3-6, 3-7

Delta Gain Display Mode 3-12, 5-6

- Chart 3-33

- Indicator 3-3, 3-8, 3-12, 3-22, 5-6

- Selection 3-8

Detailed Operating Instructions 3-11

Detection Modes 1-5

Detection Type 1-5

Detectors

- Selection Command and Query A-12

Direct Digital Synthesizer 4-2, B-3

- Description 4-41

Disassembly 5-24

- Cardcage Backplane Removal and Replacement 5-26

- Cover Removal and Replacement 5-24

- Front Panel Assembly 5-27

- Front Panel Assembly Removal and Replacement 5-27

- Plug-In Module Removal and Replacement 5-25

- Rear Panel Assembly 5-31

- Rear Panel Assembly Removal and Replacement 5-30

Display Brightness Mode

- Selection 3-9

Displays 3-1, 4-51, 4-54, 4-61, 5-16
 Brightness Adjustment 3-9, 3-26, 5-8
 Default Brightness 3-6
 Frequency Tuning 1-4, 3-3, 3-13, 3-17, 3-19, 3-20, 3-21, 3-22, 3-23, 3-24, 3-26, 3-27, 3-29, 3-30, 5-5, 5-6
 IF Bandwidth 3-3, 3-7, 3-13, 5-5
 IF Gain 3-3, 3-7, 3-12, 3-13, 3-17, 3-22, 3-23, 5-5
 In Remote Mode 3-28
 Interface 4-56
 Powerup Settings 3-5
 Reset 4-57
 RF Input Attenuation 3-3, 3-7, 3-11, 3-27, 5-5

Drawings
 Assembly 6-1, 6-11
 Detail 6-1
 Indented Drawing List 6-1
 Parts Lists 6-1, 6-11
 Schematics 6-1, 6-14
 Specifications 6-1
 Test Procedures 6-1

DVM Signal Source 4-27
EEPROM 4-60, 4-61, 4-64, 5-22, B-2
End-to-End Gain 4-13, 4-15, 5-22
 Command and Query A-13
Environmental Extremes 5-1
EPROM 4-58, 4-60, 4-61, 4-64, 6-10, 6-12, B-1, B-2
Equipment Connection 2-4
Error Beep 3-26
Extended Bandwidth Mode
 Chart 3-33
 Selection 3-8
External Interfaces 2-6
External Wideband Mode 5-6
 Chart 3-33
 Connector 4-12, 5-23
 Frequency Tuning 4-1
 Indicator 3-3, 3-8, 3-13, 3-23, 5-6
 Precedence in Gain Display 3-23
 Selection 3-8, 3-23
Factory Settings 3-5
False Clocking 4-54
Fan 4-2, 4-64, 4-67, 4-70, 5-16, 5-31, 6-10, 6-13
Fault Beep 3-26

Fault Isolation 5-15
 AGC Inoperative 5-23
 Audio Output Inoperative 5-17
 Autorange Inoperative 5-23
 BFO Inoperative 5-23
 Front Panel Displays/Indicators Illuminated But Random 5-16
 Front Panel Operative, Signal Path Inoperative 5-20
 General Suggestions 5-23
 IEEE-488 Interface Inoperative 5-23
 Log Detector Inoperative 5-23
 Not Enough or Too Much IF Gain Control Range 5-22
 One or More DC Supplies Inoperative 5-18
 One or More IF Bandwidths Inoperative 5-22
 Radio Completely Dead 5-16
 RF Input Selection/Attenuation Inoperative 5-17
 Tuning Band 3 Operative, Bands 1/2 Inoperative 5-21
 Tuning Bands 1 and 2 Operative, Band 3 Inoperative 5-21
 X Axis Output Inoperative 5-17
 Z Axis Output Inoperative 5-23
Field Service Adjustments 5-32
 523 - 533 MHz Mixer Loop Adjustment 5-38
 AGC Adjustment 5-34
 Back End IF Overload Threshold Adjustment 5-34
 BFO Adjustment 5-36
 DCIF Offset Adjustment 5-35
 Front End Overload and Underload Adjustments 5-33
 Log Detector Adjustment 5-35
 Low Frequency Synthesizer Adjustment 5-38
 Microwave RF Module Adjustment 5-32
 Programmable Microwave Synthesizer Adjustment 5-37
 Video Overload Threshold Adjustment 5-37
 Z Axis Output Adjustment 5-36
Fixed LO Synthesizer Module 4-34, 4-46, 5-15, 6-6, 6-12, 6-15
 Address Map 4-45, B-6
 Control Interface 5-20
 Description 4-44
 Field Service Adjustments 5-32
 Lock Indicators 5-22
 Source of 2 MHz Reference 4-41
Flex Cables 4-2, 6-1, 6-10, 6-11, 6-12, 6-13

Frequency Range 1-3
Frequency Tuning 1-4, 3-7, 3-13
 Absolute 3-13
 Band Break Hysteresis 4-1
 Bands 1-4
 Bandwidth Gap Indicator 3-17
 Bandwidth Limit Indicator 3-17
 Command and Query A-11
 Control Knob 3-8, 3-9, 3-10, 3-13, 3-17, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 4-1, 4-51, 4-54, 5-5, 6-8, 6-12
 Default 3-6
 Display 1-4, 3-3, 3-13, 3-17, 3-19, 3-20, 3-21, 3-22, 3-23, 3-24, 3-26, 3-27, 3-29, 3-30, 5-5, 5-6
 In MDC Mode 3-14, 3-28
 In Tune Mode 3-19
 Interference 1-4
 Keypad 4-1
 Pushbuttons 3-3, 3-7, 3-8, 3-9, 3-10, 3-13, 3-17, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 4-1, 5-5
 Range in MDC Mode 3-1
 Step Size Command and Query A-11
 Step Up and Down Commands A-11
 Stepped 3-13
 Tuning Bands 4-1
 Using Stored Step Size 3-14
Frequency Tuning Bands 5-17
 Hysteresis 5-10
 None Operative 5-20
Front End Noise 5-9
Front End Overload 4-50
 Detector 4-13
 Indicator 3-3, 3-10, 3-17, 5-6, 5-11
Front End Underload 4-50
 Detector 4-13
Front Panel 4-2, 5-15, 5-16, 5-24, 6-8, 6-15
 Assembly 6-8, 6-12
 Bulkhead 4-34, 5-28, 6-8, 6-13
 Connection to Cardcage Backplane 4-47
 Control Section 4-51
 Disassembly 5-27
 Fault Isolation 5-16
 Nomenclature 3-3
 Reference Designations 3-2
 Removal and Replacement 5-27
 RF Components 4-8
 Schematic 6-8
 Switch/Display PCB Mounting 4-51
Front Panel Beep 3-3, 3-11, 3-26, 4-53, 4-57
 Chart 3-34
 Default 3-6
 Fault Isolation 5-16
 Level Adjustment 3-9
 Volume Adjustment 5-7
Fuses 2-5, 3-5, 4-64, 4-67, 5-16

- Gain 1-3
- Gain Mode 3-18, 3-19
 - Absolute Gain Display Mode Selection 3-33
 - Chart 3-33
 - CW Gain Distribution Selection 3-33
 - Default 3-6
 - Delta Gain Display Mode Selection 3-33
 - Description 3-22
 - Impulsive Gain Distribution Selection 3-33
- Gasketing 5-24
- GLI 4-57
- GPIB Mode 3-18
 - Chart 3-34
 - Description 3-29
 - Indicator 3-19, 3-29
- Ground Loop Isolator 4-8, 4-57
- Grounding 2-6
 - Color Code 4-71
 - Ground Loop Isolator 4-8
 - Strap 1-7, 2-10
 - Stud 2-10, 3-5
- Heatsinks 5-31
- Hexadecimal Addressing B-1
- Host Computer 3-1, 3-28, 3-29, A-1
- I/O Bus B-1, B-2
 - Address Map B-2
- I/O Configuration B-1
- IEEE-488 Interface 3-1, 3-7, 4-54, 4-56, 4-58, 4-61, 4-63
 - Acceptor Handshake A-3
 - Address 5-23
 - Address Selection A-1
 - Address Setting Procedure 2-6
 - Address Switch Settings 2-8
 - ATN A-2
 - Capability Levels 1-6, A-3, A-5
 - Chassis Cable 4-69
 - Clear Status Command A-7
 - Command Error Status A-8
 - Common Commands and Queries A-6
 - Compound Command Headers A-2
 - Connector 2-4, 3-5, 4-61, 4-69, 5-30
 - Connector Pinout 2-7
 - Controllable Receiver Functions 1-6
 - Controller Function A-4
 - Controller Interrupts 4-60
 - Controller Reset 4-58
 - Data Formats A-2
 - Data Separator A-2
 - DCIF Fixed Gain Command and Query A-14
 - Default Address 3-6, 3-30
 - Description 4-61
 - Detector Selection Command and Query A-12

Device Clear A-4
Device Dependent Error Status A-8
Device Trigger A-4
Device-Specific Commands and Queries A-10
Electrical Interface A-4
End-to-End Gain Command and Query A-13
EOI A-2, A-5, A-6
Execution Error Status A-8
Factory-Set Address 2-6, A-1
Fault Isolation 5-23
Frequency Tuning 4-1
Frequency Tuning Command and Query A-11
Frequency Tuning Step Size Command and Query A-11
Frequency Tuning Step Up and Down Commands A-11
General Command Formats A-1
GPIB Mode Indicator 3-19
Identification Query A-6
IF Attenuation Command and Query A-13
IF Attenuation Linearization Table Command and Query A-14
IF Bandwidth Command and Query A-12
IF Gain Command and Query A-12
IF Gain Distribution Command and Query A-12
Implementation 4-60
In Remote Mode 3-28
Interface Clear A-5
Listener Function A-3
Local Lockout 3-30
Low Level Interface Functions A-3
MDC Address 3-27
MDC Mode 3-27
Message Separator A-2
Message Terminator A-2
Operation Complete Command and Query A-7
Operation Complete Status A-7
Parallel Poll A-4
Performance Test 5-13
Power On Status A-8
Query All Settings A-13
Query Error Status A-8
Recall Settings Command A-10
Remote Mode Indicator 3-19
Remote/Local A-3
Request Control Status A-8
Reset 3-30
Reset Command A-6
RF Input Attenuation Command and Query A-11
RF Input Select Command and Query A-11
Selection Mode 3-8, 3-29
Self Test Query A-7
Serial Poll A-5
Service Request A-3
Service Request Enable Command and Query A-8

- Source Handshake A-3
- Standard Event Status Enable Command and Query A-7
- Standard Event Status Query A-8
- Standard Event Status Register A-7
- Status Byte Register A-7
- Status Query A-9
- Store Settings Command A-9
- Talker Function A-3
- User Request Status A-8
- Wait to Continue Command A-7
- Whitespace A-1, A-2
- IF Attenuation
 - Command and Query A-13
 - Linearization Table Command and Query A-14
- IF Bandwidth 1-5, 3-13
 - Bandwidth Gap Indicator 3-17
 - Bandwidth Limit Indicator 3-17
 - Command and Query A-12
 - Default 3-6
 - Display 3-3, 3-7, 3-13, 5-5
 - Filter Type 4-19
 - Implementation 4-17
 - In MDC Mode 3-28
 - Pushbuttons 3-3, 3-7, 3-13, 5-5
 - Selection 3-7, 5-9
- IF Gain 3-12
 - Command and Query A-12
 - Control Knob 3-7, 3-12, 4-51, 4-54, 5-5, 6-8, 6-12
 - Default 3-6
 - Display 3-3, 3-7, 3-12, 3-13, 3-17, 3-22, 3-23, 5-5
 - Distribution Command and Query A-12
 - Distribution Tables 5-22
 - Linearization Tables 5-22
 - Mode Indicators 3-3
 - Selection 3-7
 - Variable Attenuators 4-13
- IF Rejection 1-3
- Image Rejection 1-3
- Impulsive Gain Distribution 3-12, 3-15, 3-22
 - Selection 3-33
- Indented Drawing List 6-1

Indicators 3-1, 4-51, 4-54, 5-16
Absolute Gain Display Mode 3-3, 3-8, 3-12, 3-22, 5-6
AC High 2-5, 3-3, 3-10, 3-17, 4-64, 5-6, 5-8, 5-19
AC Low 2-5, 3-3, 3-10, 3-17, 4-64, 5-6, 5-8, 5-19
AGC 3-3, 3-8, 3-12, 3-23, 5-6
Alternate Function 3-17, 3-19, 3-20, 3-21, 3-22, 3-23, 3-24, 3-26, 3-27, 3-29, 3-30, 5-6
AM Slideback Threshold 5-6
Audible 3-26
Autorange 3-3, 3-8, 3-11, 3-23, 5-6
Back End Overload 3-3, 3-10, 3-17, 5-6, 5-11
Bandwidth Gap 3-3, 3-10, 3-14, 3-17, 5-6
Bandwidth Limit 3-3, 3-10, 3-14, 3-17, 5-6
BFO 3-15, 5-5
CW Gain Distribution 3-3, 3-8, 3-12, 3-22, 5-6
DC Regulation 3-3, 3-10, 3-17, 4-64, 5-6, 5-19
Delta Gain Display Mode 3-3, 3-8, 3-12, 3-22, 5-6
External Wideband Mode 3-3, 3-8, 3-13, 3-23, 5-6
Front End Overload 3-3, 3-10, 3-17, 5-6, 5-11
Gain Mode 3-3
GPIB Mode 3-19, 3-29
In Remote Mode 3-28
Interface 4-56
Log Detector 3-15, 5-5
MDC Mode 3-1, 3-3, 3-27, 4-51, 5-6
Operating Mode 3-3, 3-19, 3-22, 3-23, 3-26, 3-30, 4-53, 4-56
Powerup Settings 3-5
Rate Mode 3-19, 3-20, 5-7
Recall Mode 3-19, 3-24, 5-7
Remote Mode 3-1, 3-19, 4-51
Reset Mode 5-7
RF Input Select 3-11, 5-5, 5-16
Scan Mode 3-1, 3-19, 3-21, 5-7
Select 3-17
Select Left 3-21, 5-7
Select Right 3-21, 5-7
Select Step 3-14, 3-21, 5-6
Start Mode 3-19, 5-7
Status 3-3, 3-16, 3-26
Step Mode 3-19, 3-20, 5-7
Stop Mode 3-19, 3-20, 5-7
Store Mode 3-19, 3-23, 5-7
Synthesizer Lock 3-3, 3-10, 3-17, 5-6, 5-9, 5-10, 5-21, 5-23
Tune Mode 3-1, 3-19, 5-7
Z Axis Enable 3-16, 5-6
Z Axis Invert 3-16, 5-6
Installation 5-1
Instruction Addresses B-1
Insurance 2-11

Interface PCB 4-34, 4-51, 4-53, 4-61, 5-17, 6-9, 6-12, 6-15
 Address Map B-8
 Bus Connection to Processor PCB 4-61
 Description 4-54
 Fault Isolation 5-16
 Link to Cardcage 5-20
 Mating With Switch/Display PCB 4-53
 Removal and Replacement 5-27
 Reset 4-58
 Status/Control Output 4-61
 X Axis Signal Source 4-58
Isolation Between RF Inputs 1-3
Keypad 3-1, 3-3, 3-7, 3-8, 3-9, 3-10, 3-13, 3-22, 3-23, 3-26, 3-27, 3-28, 3-30, 5-5
 Alternate Functions 3-17
 Chart 3-31
 Frequency Tuning 4-1
 In GPIB Mode 3-29
 In Rate Mode 3-20
 In Recall Mode 3-24
 In Scan Mode 3-21
 In Start Mode 3-19
 In Step Mode 3-20
 In Stop Mode 3-20
 In Store Mode 3-23
 In Tune Mode 3-19
 Key Codes 4-55
Limit Beep 3-26
LO Leakage at RF Input Connectors 1-3
Local Oscillator Usage Chart 4-35
Log Detector 4-26, 4-29
 Adjustment Procedure 5-35
 Description 4-29
 Fault Isolation 5-23
 Gain Characteristic 4-29
 Gain Control Range 5-22
 Indicator 3-15, 5-5
 Performance Test 5-11
 Pushbutton 3-3, 3-7, 3-15, 5-5
 Selection 3-7, 3-15
Long Term Storage 2-3
Low Frequency RF Module 4-46, 5-15, 5-21, 5-27, 6-3, 6-11, 6-15
 Block Diagram 4-9
 Connection to 21.4 MHz IF Amplifier Module 4-13
 Connection to Front Panel RF Components 4-8
 Control Interface 5-20
 Description 4-8
 Fault Isolation 5-21
 Field Service Adjustments 5-32
 Performance Test 5-10

Low Frequency Synthesizer Module 4-34, 4-46, 5-15, 6-6, 6-12, 6-15
 Address Map 4-44, B-3
 Connection to 523 - 533 MHz Mixer Loop 4-40
 Control Interface 5-20
 Description 4-41
 Field Service Adjustments 5-32
 Lock Status Indicators 5-20
 Source of 20 MHz Reference 4-38
 VCO Purity Adjustment Procedure 5-38
Maintenance
 Periodic 5-1
 Preventative 5-1, 5-2
Manual Mode 4-51
Maximum Tolerated RF Input 1-3
MDC Mode 3-1, 4-51, 4-60, 5-23
 And Reset Mode 3-30
 Available AGC Options 3-23
 Available Bandwidth Options 3-23
 Available Gain Options 3-22
 Chart 3-34
 Default MDC Address 3-30
 Default Selection 3-6
 Description 3-27
 Frequency Tuning 3-14
 IF Bandwidth 3-13
 IF Gain Control 3-12
 Indicator 3-1, 3-3, 3-27, 4-51, 5-6
 MDC Address 3-27
 RF Input Attenuation 3-12
 RF Inputs 3-11
 Selection 3-8
Memory Map B-1
Microprocessor 4-2, 4-56, 4-58, B-1
 Clock Frequency 4-58
 Firmware 4-63
Microwave Downconverter 1-7, 3-1, 3-27, 3-29, 4-1, 4-51, A-1

- Microwave RF Module** 3-13, 4-38, 4-39, 5-15, 5-26, 5-37, 5-38, 6-2, 6-11, 6-15
 - Block Diagram** 4-11
 - Cable** 4-45, 4-46, 4-69
 - Connection to 21.4 MHz IF Amplifier Module** 4-13
 - Connection to Cardcage Backplane** 4-45
 - Contribution to 523 - 533 MHz Mixing Loop** 4-40
 - Contribution to Synthesizer Section** 4-34
 - Control Interface** 5-20
 - Description** 4-10
 - External Wideband Monitor Connector** 5-23
 - Fault Isolation** 5-21
 - Field Service Adjustments** 5-32
 - Input Limiter** 6-11
 - Input Limiter Adjustment Procedure** 5-32
 - Power Cable** 5-25, 5-26, 6-1, 6-11
 - Removal and Replacement** 5-25
- Microwave Synthesizer Module** 4-34, 4-46, 5-15, 6-5, 6-12, 6-15
 - Address Map** 4-40, B-6
 - Control Interface** 5-20
 - Description** 4-38
 - Field Service Adjustments** 5-32
 - Reference For Low Frequency Synthesizer Module** 4-41
 - VCO Purity Adjustment Procedure** 5-37
- Mode Indicators** 3-19
 - In AGC Mode** 3-23
 - In Bandwidth Mode** 3-22
 - In Gain Mode** 3-22
- Motorboating** 4-20
- Mounting** 2-3
- Noise Figure** 1-3
 - In Microwave RF Module** 4-12
- Noise Filter**
 - In Video Module** 4-27
- Operating Modes** 1-3, 3-1
 - Chart** 3-31
 - Default** 3-6
 - Indicators** 3-3, 3-19, 3-26, 3-30, 4-53, 4-56
 - MDC Mode** 3-1
 - Remote Mode** 3-1
 - Scan Mode** 3-1
 - Tune Mode** 3-1
- Operator's Manual** 1-7, 2-1
- Overload Detectors**
 - Performance Test** 5-11
- Packing List** 2-1
- Packing Material** 2-3, 2-11

Performance Test 5-1, 5-2, 5-15
AGC 5-12
Audio Output 5-12
Autorange 5-12
BFO 5-12
Data Sheet 5-1, 5-13
Front Panel Operation 5-5
IEEE-488 Interface 5-13
IF Bandwidth Selection 5-9
IF Gain Control 5-9
Log Detector 5-11
Overload Detectors 5-11
Power Supply Monitor 5-8
Procedure 5-5
Reference Oscillator Output 5-8
RF Input Attenuation 5-9
RF Input Selection 5-8
Signal Monitor Output 5-12
Standard Test Setup 5-4
Test Equipment 5-1, 5-2
Test Points 5-1, 5-3
Tuning Bands and Synthesizer Range 5-10
Z Axis Output 5-12

Permanent Storage
Reset 3-30

Phase Locked Loop 4-2

Piezo Transducer 3-3, 3-9, 3-11, 3-26, 4-53, 4-57, 5-17
Fault Isolation 5-16

PIN Diode Attenuators A-14

PLISN 3-7

PLL 4-2

Plug-In Modules 4-2
Seating Height 5-26

Power Cord 1-6, 1-7, 2-6, 5-24

Power Supply 4-2, 5-16, 5-23, 6-10, 6-13
AC Input Module 5-16
AC Voltage Range Switch 2-5, 3-5, 3-7, 3-10, 4-64, 4-67, 5-19, 5-31
AC Voltage Subrange Switch 2-5, 3-5, 3-10, 3-17, 4-64, 4-67, 5-19, 5-31
Assembly 6-13
Block Diagram 4-66
Connection to Cardcage Backplane 4-46
DC Wiring Harness 5-16
Description 4-64
Fault Isolation 5-16, 5-18
Fuses 5-16
Monitor 4-68, 5-8, 5-19
Output Connector Pinout 4-65
Power Cord 1-6, 1-7, 2-6, 5-24
Power Switch 3-3, 3-7, 3-28, 4-67, 4-70, 5-16, 5-28, 6-10, 6-12
Power Transformer 4-64, 4-67
Receptacle Grounding 2-6
Regulated Supply 4-67
Regulator Fault Indicator 3-17
Regulators 5-16
Removal and Replacement 5-30, 5-31
Status Interface 4-56
Transformer 5-16, 6-10
Unregulated Supply 4-67
Usage Chart 4-69, 5-19
Power Switch 3-3, 3-7, 3-28, 4-67, 5-16, 5-28, 6-10
Assembly 6-12
Wiring 4-70
Power Transformer 4-64, 4-67, 5-16, 6-10
Powerup Reset 4-58
Predetection Gain 4-15
Preparation for Use 3-7
Preselector Module 4-8, 4-38, 4-46, 5-15, 5-27, 6-4, 6-12, 6-15
523 - 533 MHz Mixer Loop VCO Clamp Adjustment Procedure 5-38
Connection to Front Panel RF Components 4-8
Connection to Microwave RF Module 4-10
Contribution to 523 - 533 MHz Mixing Loop 4-40
Contribution to Synthesizer Section 4-34
Fault Isolation 5-21
Field Service Adjustments 5-32
Preventative Maintenance 5-2

Processor PCB 4-51, 4-54, 5-22, 6-10, 6-12, 6-15
 Address Map 4-61, B-7
 Administration of Autorange 5-23
 Block Diagram 4-59
 Cardcage Backplane Interface Buffer 4-56, 4-61
 Configuration Jumpers B-1
 Description 4-58
 Dipswitch 3-28, 3-29, 4-60, 4-61
 Fault Isolation 5-16, 5-23
 Interface Buffer 5-20
 Mating With Interface PCB 4-58
 Removal and Replacement 5-27
 Reset 4-58
 Reset Switch 3-30, 4-58
 Status/Control Output Pass-Through 4-61
Programmable Low Frequency Synthesizer 5-38
 Contribution to 523 - 533 MHz Mixer Loop 4-40
 Description 4-41
 Range in Band 3 4-40
 Use by Low Frequency RF Module 4-8
Programmable Microwave Synthesizer 4-1, 5-21
 Description 4-38
 VCO Purity Adjustment Procedure 5-37
PROM 6-5, 6-12
Purchase Order 2-1
Pushbuttons 3-1, 4-51, 4-54, 5-16
 Alternate Function 3-3, 3-8, 3-9, 3-10, 3-17, 3-19, 3-20, 3-21, 3-22, 3-23, 3-24, 3-26, 3-27, 3-28, 3-29, 3-30, 5-6
 BFO 3-3, 3-7, 3-15, 5-5
 Debouncing 4-54
 Frequency Tuning 3-1, 3-3, 3-7, 3-8, 3-9, 3-10, 3-13, 3-17, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 4-1, 5-5
 IF Bandwidth 3-3, 3-7, 3-13, 5-5
 Lighted 6-9, 6-12
 Log Detector 3-3, 3-7, 3-15, 5-5
 RF Input Attenuation 3-1, 3-3, 3-7, 3-11, 3-23, 3-27, 5-5
 RF Input Select 3-1, 3-3, 3-7, 3-11, 5-5, 5-16
 Select 3-3, 3-17, 3-19, 3-21, 3-22, 3-23, 3-24, 3-26, 3-30
 Select Left 3-7, 3-8, 3-9, 3-10, 3-13, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 5-6, 5-7
 Select Right 3-7, 3-8, 3-9, 3-10, 3-13, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 5-6, 5-7
 Select Step 3-8, 3-9, 3-10, 3-14, 3-19, 3-20, 3-21, 3-27, 3-29, 3-31, 5-6
 Z Axis Enable 1-6, 3-3, 3-7, 3-16, 5-6
 Z Axis Invert 1-6, 3-3, 3-7, 3-16, 5-6

- R-110 6-1
 - Connection 5-1
 - Frequency Accuracy 1-4
 - Frequency Stability 1-4
 - Installation 5-1
 - Mechanical Dimensions 1-1
 - Operating Humidity Range 1-1
 - Operating Temperature Range 1-1
 - Physical Characteristics 1-1
 - Physical Description 4-2
 - Purpose 1-1
 - Reference Oscillator 4-38
 - Reset 3-30
 - Simplified Block Diagram 4-3, 4-4, 4-5, 4-6, 4-7
 - Specifications 1-1
 - Test Procedure 6-1
 - Top Assembly 6-1, 6-11
 - Top Level Schematic 6-1
- R-1180 1-1, 1-7, 3-1, 3-27, 3-29, 4-1, 4-51, A-1
- R-1260i 1-7
- Rack Mounting 2-3
- Rack Slides 2-3, 5-24
- RAM 4-58, 4-61, 4-64, B-2
- Ramped Tuning 3-14
 - Chart 3-31
 - During Scan Pause 3-21
 - Selection 3-8, 3-20
- Rate Mode 3-18, 5-7
 - Chart 3-31
 - Continue After Scan Pause 3-31
 - Default 3-6
 - Description 3-20
 - Indicator 3-19, 3-20, 5-7
 - Revert After Scan Pause 3-31
 - Scan Repeat Options 3-31
 - Selection 3-9
- Rear Panel 4-2, 5-15, 5-16, 5-24, 6-10, 6-13, 6-15
 - Assembly 6-10, 6-13
 - Description 4-64
 - Disassembly 5-31
 - Nomenclature 3-5
 - Reference Designations 3-4
 - Removal and Replacement 5-30
 - Schematic 6-10
- Recall Mode 3-18, 5-7
 - Chart 3-33
 - Default Settings 3-25
 - Description 3-24
 - Indicator 3-19, 3-24, 5-7
 - Recovered Settings 3-24
 - Selection 3-8
 - Unrecovered Settings 3-25

- Receiving Inspection 2-1
- Reference Oscillator 1-4, 4-38, 5-8, 6-5
 - Aging 1-4
 - Output 1-4, 3-16, 4-38
 - Temperature Stability 1-4
- Reference Oscillator Output 1-4, 3-16, 4-38
 - Connector 2-4, 3-5, 4-38, 5-8
- Remote Mode 3-1, 4-51, 4-60, 5-23
 - And Reset Mode 3-30
 - Available AGC Options 3-23
 - Available Bandwidth Options 3-23
 - Available Gain Options 3-22
 - Chart 3-35
 - Controllable Settings 3-28
 - Description 3-28
 - Detector Selection 3-15
 - Frequency Tuning 3-14
 - IF Bandwidth 3-13
 - IF Gain Control 3-12
 - Indicator 3-1, 3-19, 4-51
 - RF Input Attenuation 3-11
 - RF Inputs 3-11
- Reset Mode 3-18, 5-7
 - Chart 3-35
 - Description 3-30
 - Indicator 5-7
 - Selection 3-9
- Reshipment 2-11
- Residual Spurious Responses 1-3
- Revert After Scan Pause
 - Chart 3-31
 - Selection 3-9
- RF Input Attenuation 3-11
 - Default 3-6
 - Display 3-3, 3-7, 3-27, 5-5
 - In MDC Mode 3-1, 3-27
 - Performance Test 5-9
 - Pushbuttons 3-1, 3-3, 3-7, 3-23, 3-27, 5-5
 - Selection 3-7
 - Selection Command and Query A-11
- RF Input Attenuator 4-2, 6-8, 6-13
 - Assembly 6-13
 - Autorange 3-23, 5-23
 - Control 4-57
 - Description 4-8
 - Fault Isolation 5-17
 - Operation 1-3
 - Range 1-3
 - Removal and Replacement 5-28
 - Switching Time 1-3
- RF Input Impedance 1-3

- RF Input Relays 4-2, 4-57, 6-8
 - Assembly 6-13
 - High/Low Band Selection 4-8
 - RF Input Selection 4-8
- RF Input VSWR 1-3
- RF Inputs 1-3, 3-7, 3-11, 4-2, 4-8
 - Band Select Relay 5-21
 - Connectors 2-4, 3-3, 4-8, 5-28
 - Default Selection 3-6
 - Distribution Relay 5-21
 - Fault Isolation 5-17, 5-20
 - Impedance 1-3
 - In MDC Mode 3-1, 3-27
 - Isolation Between 1-3
 - LO Leakage 1-3
 - Maximum Tolerated Input 1-3
 - Pushbuttons 3-1, 3-3, 3-7, 3-27
 - Relays 4-2, 4-8, 4-57, 6-8
 - Select Indicators 5-5, 5-16
 - Select Pushbuttons 5-5, 5-16
 - Selection 3-7, 5-8
 - Selection Command and Query A-11
 - VSWR 1-3, 5-32
- RF Section
 - Description 4-8
 - Front Panel Components 4-8
- RS-232 Interface 4-54, 4-58, 4-63
 - Baud Rate Setting Procedure 2-6
 - Baud Rate Switch Settings 2-9
 - Connector 4-58
 - Connector Pinout 2-9
 - Description 4-58
- Scan Mode 3-1, 3-18, 5-7
 - Chart 3-32
 - Continue After Pause 3-9
 - Description 3-21
 - Frequency Range With MDC Mode Enabled 3-28
 - Frequency Tuning 4-1
 - Indicator 3-1, 3-19, 3-21, 5-7
 - On the Fly Rate Adjustment 3-9, 3-32
 - Pause 3-10, 3-32
 - Resumption After Pause Selection 3-20
 - Revert After Pause 3-9
 - Scan Rate Entry 3-20
 - Scan Repeat Selection 3-20
 - Selection 3-9
 - Start Frequency Entry 3-19
 - Step Size Entry 3-20
 - Stop Frequency Entry 3-20
 - Timing Reference 4-60
- Scan Pause 3-21

Scan Repeat
 Selection 3-9, 3-31

Schematics 6-1
 Nomenclature 6-14

Select Indicators 3-17
 Left 5-7
 Right 5-7
 Step 5-6

Select Pushbuttons 3-3, 3-7, 3-8, 3-9, 3-17
 Chart 3-31
 In AGC Mode 3-23
 In Bandwidth Mode 3-23
 In Beep Mode 3-26
 In Brightness Mode 3-26
 In Gain Mode 3-22
 In Recall Mode 3-24
 In Reset Mode 3-30
 In Scan Mode 3-21
 In Store Mode 3-23
 In Tune Mode 3-19
 Left 3-8, 3-9, 3-10, 3-13, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 5-6, 5-7
 Right 3-8, 3-9, 3-10, 3-13, 3-19, 3-21, 3-26, 3-27, 3-29, 3-31, 5-6, 5-7
 Step 3-8, 3-9, 3-10, 3-14, 3-19, 3-20, 3-21, 3-27, 3-29, 3-31, 5-6

Semi-Rigid Cables 4-2, 6-1, 6-8, 6-11, 6-13

Serial Numbers 2-1

Service Kit 1-7, 5-32

Shaft Encoders 4-51, 4-54, 4-55

Shipping Container 2-1, 2-2

Shipping Damage 2-1

Shipping Label 2-11

Shipping Weight 2-1

Signal Monitor Output 3-7, 3-16, 5-23
 Bandwidth 1-5
 Center Frequency 1-5
 Connection to 21.4 MHz IF Amplifier Module 4-13
 Connector 2-4, 3-5, 3-7, 4-13, 5-12
 Level 1-5
 Performance Test 5-12

Specifications 1-1, 6-1

Spurious-Free Dynamic Range 1-3

Start Mode 3-18, 5-7
 Chart 3-31
 Default 3-6
 Description 3-19
 Indicator 3-19, 5-7
 Selection 3-9

Status Indicators 3-10, 3-16, 3-26

Status/Control Output

- Cardcage Status 4-56
- Chassis Cable 4-69
- Connector 2-4, 3-5, 4-56, 4-61, 4-64, 4-69
- Connector Pinout 2-10
- External Device Control 4-56
- Power Supply Status 4-56, 4-64

Step Mode 3-18, 3-19, 5-7

- Chart 3-31
- Default 3-6
- Description 3-20
- Indicator 3-19, 3-20, 5-7
- Ramped Tuning 3-31
- Selection 3-8, 3-9

Stop Mode 3-18, 5-7

- Chart 3-31
- Default 3-6
- Description 3-20
- Indicator 3-19, 3-20, 5-7
- Selection 3-9

Store Mode 3-18, 5-7

- Chart 3-32
- Description 3-23
- For Powerup Initialization 3-5
- Indicator 3-19, 3-23, 5-7
- Selection 3-8
- Settings Not Saved 3-24
- Settings Saved 3-23

Switch/Display PCB 4-51, 4-54, 6-9, 6-12, 6-15

- Address Map B-12
- Audible Indicator 4-57
- Description 4-51
- Fault Isolation 5-16
- Mating With Interface PCB 4-58
- Mounting 4-51
- Removal and Replacement 5-27

Switches

- AC Power 4-67, 6-10, 6-12
- AC Voltage Range 2-5, 3-5, 3-7, 3-10, 4-64, 4-67, 5-19, 5-31
- AC Voltage Subrange 2-5, 3-5, 3-10, 3-17, 4-64, 4-67, 5-19, 5-31
- Dipswitch 2-6, 2-8, 2-9, 3-28, 3-29, 4-60, 4-61, A-1
- Reset 3-30, 4-58

Synthesizer Lock Indicator 3-3, 3-10, 3-17, 5-6, 5-9, 5-10, 5-21, 5-23

Synthesizer Lock Status 4-50

Synthesizer Section

- Block Diagram 4-36, 4-37
- Description 4-34

Synthesizers and LOs
 2 GHz Fixed LO 5-21
 21.4 MHz Fixed LO 5-22
 3 MHz Fixed LO 5-21
 523 - 533 MHz Mixer Loop 5-21
 DCIF Filter Clock 5-22
 Description 4-34
 Programmable Microwave Synthesizer 5-21
 Usage Chart 4-35

Temperature Compensation
 In 21.4 MHz IF 4-15
 In Microwave RF Module 4-12

Temperature Extremes 5-15

Temporary Storage
 Reset 3-30

Thermal Shutdown 5-19

Top Assembly 6-1, 6-11

Top Level Schematic 6-1

Tune Mode 3-1, 3-18, 5-7
 Chart 3-31
 Description 3-19
 Indicator 3-1, 3-19, 5-7
 Selection 3-10
 Stored Step Size Entry 3-20
 Tune Stored Step Size Mode 3-8
 With MDC Mode Enabled 3-27

Tune Stored Step Size Mode
 Selection 3-8

Tuned Frequency
 Default 3-6
 Display 5-6
 Range in MDC Mode 3-1
 Selection 3-7

Tuning Bands 1-4, 4-1
 Ranges 1-4

Tuning Digit Selection
 Default 3-6

Typical Fault Conditions 5-15

Unpacking 2-3

Varistors 4-67

Ventilation Clearance 2-3

Video
 Bandwidth 1-6
 Linear Dynamic Range 1-6
 Log Dynamic Range 1-6
 Optional Functions 1-6
 Outputs 1-6

Video Module 4-46, 5-15, 5-20, 5-21, 5-27, 5-34, 6-7, 6-12, 6-15
Address Map 4-32, B-7
AGC 5-23
Audio Source 5-17
BFO Adjustment Procedure 5-36
Block Diagram 4-28
Connection to 21.4 MHz IF Amplifier Module 4-13, 4-15
Connection to 21.4 MHz IF Filter Module 4-13, 4-17, 4-19
Connection to DCIF Module 4-19
Connection to X Axis/Audio Amplifier PCB 4-33
Control Interface 5-20
Description 4-26
Fault Isolation 5-22, 5-23
Field Service Adjustments 5-32
Log Detector Adjustment Procedure 5-35
Noise Filter Selection Chart 4-29
Programmable Noise Filter 4-27
Relay Selection Chart 4-32
Source of AGC for 21.4 MHz IF 4-15
Video Overload Threshold Adjustment Procedure 5-37
Z Axis Output Adjustment Procedure 5-36
Video Output 3-7, 3-15, 4-30
Amplifier 4-26
Connector 2-4, 3-3, 3-7, 3-15
Default 3-6
Description 4-29
Impedance 1-6
Level 1-6
Overload Indication 3-17
Whitespace A-1, A-2
Wideband AM Detector 4-26
Wiring
Color coding 5-18
Description 4-69
X Axis Output 3-10, 3-16, 4-34
Connector 2-4, 3-3, 3-10, 4-58, 5-7
Default 3-6
Description 4-58
Fault Isolation 5-17
Signal Source 4-54, 4-57
X Axis/Audio Amplifier PCB 4-33, 6-13, 6-15
Audible Indicator 4-57
Connection to Video Module 4-30
Connection to X Axis Signal Source 4-57
Fault Isolation 5-17
Removal and Replacement 5-27
X Axis Output Buffer 4-58

Z Axis Output 3-7, 3-16
Adjustment Procedure 5-36
Amplifier 4-26
Connector 2-4, 3-5, 3-7, 5-12
Default 3-6
Description 4-31
Enable Indicator 5-6
Enable Pushbutton 1-6, 3-3, 3-7, 5-6
Fault Isolation 5-23
Impedance 1-6
Invert Indicator 5-6
Invert Pushbutton 1-6, 3-3, 3-7, 5-6
Level Control Knob 1-6, 3-3, 3-7, 3-28, 5-28, 6-10, 6-12
Performance Test 5-12