

Service Manual **Monitoare** **PC**

PHILIPS.	4822 727 18973.
PHILIPS.	7CM3209.
PHILIPS.	7CM3209/60T.
PHILIPS.	7CM3209/65T.
PHILIPS.	7CM3209/66T.
PHILIPS.	7CM3209/67T.
PHILIPS.	7CM3209/68T.
PHILIPS.	7CM3209/69T.
PHILIPS.	7CM3279.
PHILIPS.	7CM3279/60T.
PHILIPS.	7CM3279/65T.
PHILIPS.	7CM3279/66T.

General

Mains voltage : 195.5 - 264.5 V
 Mains frequency : 50 Hz
 Power consumption : 80 W (typical)
 100 W (max.)
 Operating temperature : 10°C to 40°C
 Weight : 12.8 kg
 Width : 356mm
 Depth : 395mm
 Height : 359mm

Picture tube



Size : 14 inch
 Light transmission : 57 %
 (dark glass)
 Deflection angle : 90 Degrees
 EHT voltage : 24.5 kVolt
 Pitch : 0.28 mm

Video

Dot rate : 45 MHz
 Display area : horizontal 270mm
 vertical 199mm
 Image area : horizontal 240mm +/- 3mm
 vertical 180 mm +/- 3mm (5 mm for 35.5 kHz)
 Vertical frequency : 50 - 90 Hz
 Sync. polarity : positive or negative
 Vertical shift range : 10 mm Min.
 Horizontal frequency : 31.47/35.2/35.5 kHz
 Catch-in range : +/- 600 Hz
 Sync. polarity : positive or negative
 Horizontal shift : 10 mm Min.

RESOLUTION MODES

Modes	Horizontal frequencies	Vertical frequencies	H. sync. polarity	V. sync. polarity	Resolution Dot * lines
VGA	31.5 kHz	70 Hz	Positive (+)	Negative (-)	640 * 350
VGA	31.5 kHz	70 Hz	Negative (-)	Positive (+)	640 * 400
VGA	31.5 kHz	60 Hz	Negative (-)	Negative (-)	640 * 480
VGA +	35.2 kHz	56 Hz	Positive (+) Negative (-)	Positive (+) Negative (-)	800 * 600
8514A	35.5 kHz	87 Hz	Positive (+) Negative (-)	Positive (+) Negative (-)	1024 * 768 (interlaced)

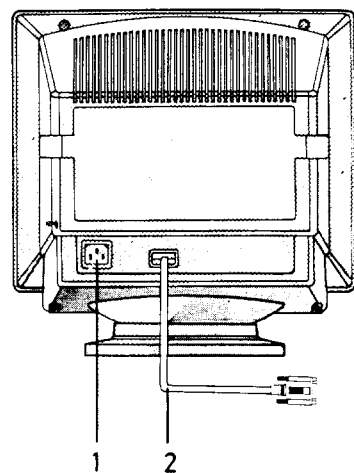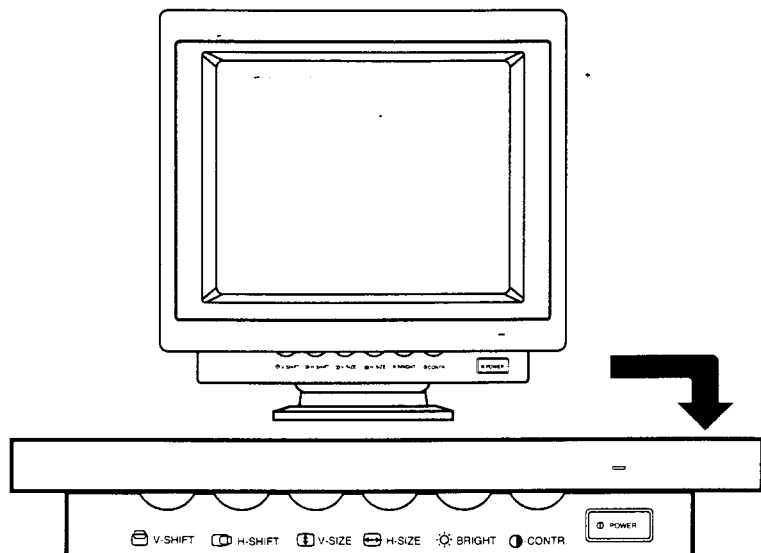


- 1. Power connector
- 2. "D" Shell interface cable

INPUT- OUTPUT SIGNALS

Pin	Signal	Sensitivity	Terminal impedance
1	Red Video input	RGB- analog 0-0.7 Vpp	75 Ω
2	Green Video input	RGB- analog 0-0.7 Vpp	75 Ω
3	Blue Video input	RGB- analog 0-0.7 Vpp	75 Ω
4	Ident output (connected to pin 10)		
5	Self test input (ground)		
6	Red Video ground		
7	Green Video ground		
8	Blue Video ground		
9	Not connected (no pin)		
10	Logic ground		
11	Ident output (connected to pin 10)		
12	Ident output (not connected)		
13	Horizontal sync.	TTL Level L=0 - 0.8 V H=2.4 - 5 V	2.2 kΩ (pull down)
14	Vertical sync.	TTL Level L=0 - 0.8 V H=2.4 - 5 V	2.2 kΩ (pull down)
15	Not connected		



INPUT-OUTPUT SIGNALS



15 PIN 'D'-SHELL CONNECTOR

Warnings and Notes

Warnings

1. Safety regulations require that the unit should be returned in its original conditions and that components identical to the original components are used. The safety components are indicated by the symbol 
2. In order to prevent damage to ICs and transistors, all high-voltage flash-overs must be avoided. In order to prevent damage to the picture tube, the method shown in Fig. 3.1 should be used to discharge the picture tube. Use a high-voltage probe and a multimeter (position DC-V). Discharge until the meter reading is 0 V (after approx. 30s).
3. **ESD** 
All ICs and many other semiconductors are sensitive to electrostatic discharges (ESD). Careless handling during repair can drastically shorten the life. Make sure that during repair you are connected by a pulse band with resistance to the same potential as the earth of the unit. Keep components and tools also at this same potential.
4. When repairing a unit, always connect it to the mains voltage via an isolating transformer.
5. Be careful when taking measurements in the high-voltage section and on the picture tube panel.
6. It is recommended that safety goggles are worn when replacing the picture tube.
7. When making settings, use plastic rather than metal tools.
This will prevent any short-circuit and the danger of a circuit becomes unstable.
8. Never replace modules or other components while the unit is switched on.
9. Together with the deflection unit the picture tube is used as an integrated unit.
Adjustment of this unit during repair is therefore not recommended.
10. After repair the wiring should be fastened once more in the cable clamps for this purpose.

Notes

1. The direct voltages and oscillograms are average voltages. They have been measured by using the Service testsoftware and under the following conditions:
 - Signal pattern: cross hatch
 - Adjust brightness and contrast control for the mechanical mid-position (click position)
2. The picture tube panel has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.
3. The semiconductors indicated in the circuit diagram(s) and in the parts lists are completely interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.

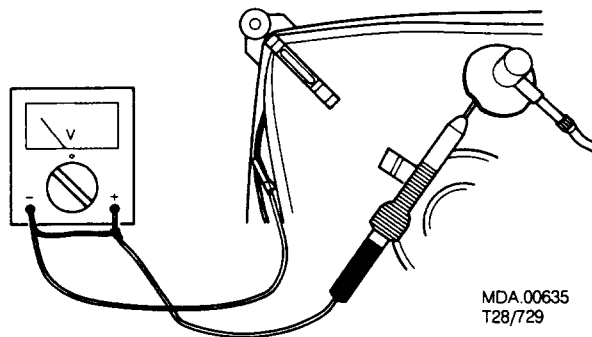


Fig.3.1

General:

When carry-out the electrical settings in many cases a video signal must be applied to the monitor. A computer with an "ATI1024 VG-1.04/PH Beta4" interface card (1024 * 768) is used as the video signal source. The signal pattern are selected from the "Service test software" package.

Installation instruction for the ATI card:

- Place the ATI interface card in the computer.
- Select the "VSETUP" file from the utility disk belonging to the card.
- Select "ANALOG MONITOR".
- Select the "NEC 3D" option.
- Re-boot your computer again !
- Put the floppy with the "Service test software" package in the computer and select the test pattern indicated for the following settings.

Electrical adjustments(Fig.7.1)

1. B+ supply voltage (3131, 3138)

- Select the "cross-hatch" pattern.
- Set the brightness control 3318 and the contrast control 3312 to minimum.
- Set trimming potentiometer 3138 and 3131 in the mid position (that is a pre-setting).
- Connect a DC voltmeter between capacitor 2123 and ground (B+ output).
- Switch on the monitor.
- First apply a video signal in the 31.5 kHz mode, then adjust trimming potentiometer 3131 until the D.C. voltmeter reads 87V.
- Switch the video signal to 35.2/35.5 kHz mode, adjust trimming potentiometer 3138 for the following supply voltages:
 - a) 35.2 kHz mode ... 99V ± 0.5 V
 - b) 35.5 kHz mode ... 99.2V ± 0.5 V

2. Horizontal synchronisation (3425, 3421)

- Select the "cross-hatch" pattern.
- Short the junction of resistor 3423 and capacitor 2410 to ground.
- First apply a video signal in the 31.5 kHz mode, then adjust trimming potentiometer 3425 until the picture is straight.
- Then switch video signal to 35.2/35.5 kHz mode, adjust trimming potentiometer 3421 until the picture is straight.
- Remove the short-circuit (to ground).

3. Picture geometry setting (general)

- For the following settings apply a video signal (cross-hatch) to the monitor.
- Pre-set H-Shift 3416 and V-Shift 3524 (external controls) to mid-position.
- Pre-set contrast control 3312 to click position and brightness control 3318 to maximum.

3.1 Horizontal image centring (3452,3413,3922)

- Apply a video signal in the 31.5 kHz mode (480 lines). Adjust potentiometer 3452 for the correct horizontal centring of the hole raster.
- Adjust potentiometer 3413 for the correct horizontal centring of the video display.
- Switch video signal to 35.2/35.5 kHz mode. Adjust potentiometer 3922 for the correct horizontal centring of the video display.

3.2 Vertical height (3539, 3926, 3537, 3923,3919)

- Apply a video signal in the 31.5 kHz mode (480 lines).
- Set external V-size control 3567 to minimum position.
- Adjust potentiometer 3539 for a picture height of 160mm.
- Adjust external V-size control 3567 for a picture height of 180mm.
- With the same signal mode but with 400 lines.
- Set external V-size control 3567 to minimum position.
- Adjust potentiometer 3926 for a picture height of 160mm.
- Adjust external V-size control 3567 for a picture height of 180mm.
- With the same signal mode but with 350 lines.
- Set external V-size control 3567 to min position.
- Adjust potentiometer 3537 for a picture height of 160mm.
- Adjust external V-size control 3567 for a picture height of 180mm.
- Switch video signal to 35.2kHz (600 lines).
- Set external V-size control 3567 to minimum position.
- Adjust potentiometer 3923 for a picture height of 160mm.
- Adjust external V-size control 3567 for a picture height of 180mm.
- Switch video signal to 35,5kHz (768 lines).
- Set external V-size control 3567 to minimum position.
- Adjust potentiometer 3919 for a picture height of 160mm.
- Adjust external V-size control 3567 for a picture height of 180mm.

3.3 Picture width (3553, 3925)

- Apply a video signal in the 31.5 kHz mode(480 lines).
- Set external H-size control 3568 to minimum position.
- Adjust potentiometer 3553 for a picture width of 225mm.
- Adjust external H-size control 3568 for a picture width of 240mm.
- Switch video signal to 35.2/35.5 kHz mode.
- Set external H-size control 3568 to minimum position.
- Adjust potentiometer 3925 for a picture width of 225mm.
- Adjust external H-size control 3568 for a picture width of 240mm.

3.4 East-west correction (3544, 3924)

- Apply a video signal in the 31.5 kHz (480 lines). Adjust potentiometer 3544 until the vertical lines on the left- and right-hand sides of the screen are as straight as possible.
- Switch video signal to 35.2/35.5 kHz mode. Adjust potentiometer 3924 until the vertical lines on the left- and right-hand sides of the screen are as straight as possible.

4. Adjustments of:

- * VG2 (bottom knob on the line output transformer)
- * Cut-off points of the picture tube (3373, 3376, 3379)
- * White "D" (3321, 3324, 3327, 3316)
- Pre-set potentiometers 3321, 3324, 3327, 3379, 3376 and 3373 to the mid-position.
- Apply a video signal (full-white) in the 31.5 kHz mode (480 lines).
- Set brightness control 3318 at click

position and contrast 3312 and sub-contrast 3316 to minimum.

- Set VG2 potentiometer on the line output transformer to minimum.
- Adjust VG2 potentiometer to increase VG2 voltage until any colour among red, green and blue becomes "just visible"
- Adjust the potentiometer of the "two remaining" colours (3373, 3376 and 3379) to the same light output level, so that an optimal background (raster) colour is obtained.
- Adjust brightness control 3318 to maximum to double check the background (raster) colour. Then return it to click position.
- Set sub-contrast potentiometer 3316 at the mid-position and contrast control 3312 at click position.
- Adjust potentiometers 3321, 3324 and 3327 to the same light output level so that an optimal display colour (White "D") is obtained.
- If necessary, adjust sub-contrast potentiometer 3316 for the optimal light output of the video display.
- Adjust contrast control 3312 to maximum to double check the displayed colours.

5. Focussing

- Apply a video signal ("M" characters) in the 31.5 kHz mode (480 lines).
- Set brightness control 3318 at click position and contrast control 3312 to maximum.
- Adjust focus potentiometer (top knob on the line output transformer) so that the picture at 2/3 of the diagonal lines (from centre to four corners) of the displayed screen is as sharp as possible.

6. Pulse duration setting monostable multivibrator (3819)

- Apply a signal in the 31.5 kHz mode.
- Connect an oscilloscope to pin 6 of 7801.
- Using trimming potentiometer 3819, set the time of the positive period of the pulse at pin 6 of 7801 to $30 \pm 0.3\mu\text{s}$.

PARTS INDICATED ON EXPLODED VIEW, MAIN PANEL

PARTS INDICATED ON EXPLODED VIEW

CABINET PARTS

Table with 3 columns: Part number, Part number, Part number, Description. Includes items like 100 4822 430 10369 Front 7CM3209, 101 4822 413 31659 Knob, etc.

ELECTRICAL PARTS NOT ON PCB

Table with 3 columns: Part number, Part number, Part number, Description. Includes items like 150 4822 526 20183 Spoiler, 151 4822 131 20425 CRT, etc.

ACCESSORIES

Table with 3 columns: Part number, Part number, Part number, Description. Includes items like 200 4822 321 10676 Mains cord for /60T/69T, etc.

MAIN PANEL

Various

Table with 2 columns: Part number, Description. Includes items like 4822 276 11504 power switch, 4822 265 20235 2p (J15), etc.

Table with 3 columns: Part number, Part number, Part number, Description. Includes items like 4822 265 30375 4p (M405) spring for 7409, etc.



Table with 3 columns: Part number, Part number, Part number, Description. Includes items like 2102 4822 126 10177 4.7nF 400V, 2103 4822 126 10177 4.7nF 400V, etc.



Table with 3 columns: Part number, Part number, Part number, Description. Includes items like 2461 4822 121 43698 470nF 100V, 2462 4822 121 43698 470nF 100V, etc.

MAIN PANEL

3141	4822 050 21502	1k5	3467	4822 116 52215	220Ω	3804	4822 050 12403	24k 1% 0.4W
3150	4822 116 30341	6Ω 15%	3469	4822 051 10223	22k 2% 0.25W	3811	4822 051 10822	8k2 2% 0.25W
3151	4822 116 52191	33Ω	3470	4822 050 28203	82k	3812	4822 051 10123	12k 2% 0.25W
3152	4822 116 52188	27Ω	3471	4822 051 10182	1k8 2% 0.25W	3815	4822 051 10203	20k 2% 0.25W
3153	4822 050 22003	20k	3472	4822 050 22702	2k7	3819	4822 100 11392	47k potmeter
3154	4822 116 82872	82Ω 5%	3473	4822 050 24701	470Ω			
3155	4822 116 52188	27Ω	3474	4822 051 10272	2k7 2% 0.25W			
3311	4822 051 10681	680Ω 2% 0.25W	3475	4822 051 10103	10k 2% 0.25W			
3312	4822 102 10428	10k potmeter	3501	4822 051 20222	2k2 5% 0.1W			
3318	4822 102 10429	100k 20%	3502	4822 051 10102	1k 2% 0.25W	5101	4822 146 30882	power trafo
3401	4822 051 10272	2k7 2% 0.25W	3503	4822 051 10102	1k 2% 0.25W	5104	4822 157 52233	10μH
3402	4822 051 10472	4k7 2% 0.25W	3504	4822 050 21009	10Ω	5121	4822 156 21399	10μH
3403	4822 050 22702	2k7	3505	4822 051 10822	8k2 2% 0.25W	5123	4822 157 52234	100μH
3404	4822 051 10332	3k3 2% 0.25W	3506	4822 051 10392	3k9 2% 0.25W	5124	4822 157 52234	100μH
3405	4822 051 10104	100k 2% 0.25W	3507	4822 051 10472	4k7 2% 0.25W	5401	4822 148 81081	hor. drive trafo
3406	4822 051 10332	3k3 2% 0.25W	3508	4822 052 10228	2.2Ω NFR25	5402	4822 157 63715	4μH
3407	4822 051 10472	4k7 2% 0.25W	3509	4822 051 10472	4k7 2% 0.25W	5403	4822 157 62268	linearity coil
3408	4822 050 25604	560k	3510	4822 051 20222	2k2 5% 0.1W	5404	4822 157 62267	coil for 7CM3209
3409	4822 051 10104	100k 2% 0.25W	3511	4822 051 10824	820k 2% 0.25W	5404	4822 157 62675	coil for 7CM3279
3410	4822 051 10272	2k7 2% 0.25W	3512	4822 050 22208	2.2Ω	5405	4822 157 53185	drum coil
3412	4822 051 10123	12k 2% 0.25W	3513	4822 116 52215	220Ω	5406	4822 140 10388	LOT for 7CM3209
3413	4822 100 11141	10k trimpotmeter	3514	4822 116 82988	1k 2 1% 0.25W	5406	4822 140 10405	LOT for 7CM3279
3415	4822 051 10103	10k 2% 0.25W	3515	4822 050 22202	2k2			
3416	4822 102 10444	2k 0.2W	3516	4822 051 10101	100Ω 2% 0.25W			
3417	4822 051 10123	12k 2% 0.25W	3517	4822 051 10479	47Ω 2% 0.25W			
3418	4822 050 24701	470Ω	3518	4822 050 21001	100Ω	6101	4822 130 31933	1N5061
3419	4822 051 10103	10k 2% 0.25W	3519	4822 116 82642	2Ω 1W	6102	4822 130 31933	1N5061
3420	4822 050 26803	68k	3521	4822 116 82452	220Ω 5%	6103	4822 130 31933	1N5061
3421	4822 100 11163	100k potmeter	3522	4822 050 21802	1k8	6104	4822 130 31933	1N5061
3422	4822 050 27503	75k	3523	4822 050 25602	5k6	6105	5322 130 81917	SB140
3423	4822 050 21502	1k5	3524	4822 102 10428	10k potmeter	6106	4822 130 31393	RG10J
3424	4822 050 21802	1k8	3525	4822 116 80553	150Ω 5% 1W	6107	4822 130 31393	RG10J
3425	4822 100 11319	4k7	3526	4822 050 21004	100k	6108	4822 130 30621	1N4148
3426	4822 050 12202	2k2 1% 0.4W	3527	4822 051 10471	470Ω 2% 0.25W	6109	5322 130 31971	RG15D
3427	4822 050 21802	1k8	3528	4822 051 10102	1k 2% 0.25W	6110	4822 130 30621	1N4148
3428	4822 116 80551	180Ω 5% 2W	3531	4822 050 21003	10k	6111	4822 130 34167	BZX79-C6V2
3429	4822 051 10154	150k 2% 0.25W	3532	4822 050 22202	2k2	6114	4822 130 30621	1N4148
3430	4822 050 21303	13k	3533	4822 050 24703	47k	6115	4822 130 30621	1N4148
3431	4822 050 26801	680Ω	3534	4822 051 10393	39k 2% 0.25W	6116	5322 130 81917	SB140
3432	4822 050 22201	220Ω	3535	4822 051 10682	6k8 2% 0.25W	6117	4822 130 31393	RG10J
3433	4822 051 10123	12k 2% 0.25W	3537	5322 100 11544	220k	6121	5322 130 33885	RG15J
3434	4822 050 22203	22k	3539	5322 100 11544	220k	6122	5322 130 34574	1N4004G
3435	4822 050 21505	1M5	3540	4822 050 21003	10k	6124	5322 130 33885	RG15J
3436	4822 116 82454	820Ω 5%	3541	4822 050 21004	100k	6125	5322 130 33885	RG15J
3437	4822 052 10478	4.7Ω NFR25	3542	4822 050 21503	15k	6126	4822 130 31024	BZX79-B18
3438	4822 113 80582	27Ω 10% 5W	3544	4822 100 11141	10k trimpotmeter	6127	4822 130 31607	RG10D
3439	4822 050 26809	68Ω	3545	4822 050 21004	100k	6128	5322 130 33885	RG15J
3440	4822 116 82455	7k 5 0.25W	3547	4822 053 20106	10M	6129	5322 130 31971	RG15D
3442	4822 051 10104	100k 2% 0.25W	3548	4822 051 10224	220k 2% 0.25W	6130	4822 130 34167	BZX79-F6V2
3443	4822 052 10101	100Ω NFR25	3549	4822 050 24705	4M7	6131	5322 130 81917	SB140
3444	4822 052 10158	1.5Ω NFR25	3550	4822 052 10478	4.7Ω NFR25	6132	4822 130 30621	1N4148
3448	4822 116 82053	470Ω 5% 1W	3551	4822 051 10125	1M 2 5% 0.25W	6134	4822 130 30842	BAV21
3449	4822 116 82053	470Ω 5% 1W	3552	4822 050 24705	4M7	6135	4822 130 34398	BZX79-B24
3450	4822 050 21803	18k 1% 0.6W	3553	4822 100 11141	10k trimpotmeter	6401	4822 130 30621	1N4148
3451	4822 052 10158	1.5Ω NFR25	3554	4822 050 22704	270k	6402	4822 130 30621	1N4148
3452	4822 100 20647	100Ω 2W potm.	3555	4822 051 10472	4k7 2% 0.25W	6403	4822 130 30621	1N4148
3453	4822 116 80542	82Ω 1W	3556	4822 051 10681	680Ω 2% 0.25W	6404	4822 130 31607	RG10D
3454	4822 116 80542	82Ω 1W	3557	4822 051 10272	2k7 2% 0.25W	6405	4822 130 31607	RG10D
3455	4822 050 21004	100k	3559	4822 050 21003	10k	6406	4822 130 30842	BAV21
3456	4822 116 80545	1k 0.5W	3561	4822 052 10278	2.7Ω NFR25	6407	4822 130 42489	RG10G
3457	4822 050 24703	47k	3562	4822 052 10478	4.7Ω NFR25	6408	5322 130 81132	MUR4100E
3458	4822 051 10104	100k 2% 0.25W	3563	4822 052 10478	4.7Ω NFR25	6409	4822 130 80445	HER305
3459	4822 051 10102	1k 2% 0.25W	3565	4822 050 23304	330k	6410	5322 130 81132	MUR4100E
3460	4822 116 52215	220Ω	3566	4822 051 10124	120k 2% 0.25W	6412	5322 130 31971	RG15D
3461	4822 050 21002	1k	3567	4822 101 21188	100k 20% 0.2W	6414	4822 130 30621	1N4148
3462	4822 050 22203	22k	3568	4822 102 10428	10k potmeter	6415	4822 130 30621	1N4148
3463	4822 050 21004	100k	3569	4822 051 10472	4k7 2% 0.25W	6417	4822 130 34233	BZX79-C5V1
3464	4822 051 10103	10k 2% 0.25W	3801	4822 051 10103	10k 2% 0.25W	6419	4822 130 31607	RG10D
3465	4822 051 10103	10k 2% 0.25W	3802	4822 051 10103	10k 2% 0.25W	6420	4822 130 30621	1N4148
3466	4822 116 80556	120k	3803	4822 050 12403	24k 1% 0.4W			

VIDEO PANEL, LED PANEL, EMI PANEL, TRI FREQ. PANEL

6307	4822 130 30621	1N4148
6308	4822 130 30621	1N4148
6309	4822 130 30621	1N4148
6310	4822 130 42489	BYD33G
6311	5322 130 33635	BZV85-C8V2
6315	4822 130 30842	BAV21
6316	4822 130 30842	BAV21
6317	4822 130 30842	BAV21
6318	4822 130 30842	BAV21
6319	4822 130 30842	BAV21
6321	4822 130 30842	BAV21
6322	4822 130 31878	1N4003
6323	4822 130 31878	1N4003



7301	4822 209 62364	LM1203
7303	5322 130 42136	BC848C
7304	4822 130 41053	BC639
7306	4822 130 42513	BC858C
7307	4822 130 62278	2SC3950E
7308	4822 130 62278	2SC3950E
7309	4822 130 62278	2SC3950E
7311	4822 130 62279	2SC3953E
7312	4822 130 62279	2SC3953E
7313	4822 130 62279	2SC3953E
7314	4822 130 41782	BF422
7315	4822 130 41646	BF423
7316	4822 130 41782	BF422
7317	4822 130 41646	BF423
7318	4822 130 41782	BF422
7319	4822 130 41646	BF423
7321	4822 130 41646	BF423
7322	4822 130 41646	BF423
7323	4822 130 41646	BF423

LED PANEL

Various

4822 267 31366 2p connector



6137	4822 130 81701	LTL3238AS
------	----------------	-----------

EMI PANEL

Various

1330	4822 212 23683	EMI panel for /60T/65T/66T/68T
1330	4822 212 23968	EMI panel assy for /67T/69T
	4822 265 20367	2p connector



2183	4822 121 43385	47nF 20% 250V
2186	4822 122 33652	2.2nF 20% 400V
2186	4822 126 10788	220pF 250V
2188	4822 122 33652	2.2nF 20% 400V
2188	4822 126 10788	220pF 250V
2189	4822 121 51265	470nF 250V



3186 4822 053 21334 330k VR37

5102 4822 157 62256 line choke
5105 4822 157 62256 line choke

TRI FREQ. PANEL

Various

1208 4822 212 23974 Tri freq. panel assy

2901 4822 121 50539 4.7nF 1% 63V
2902 4822 122 33496 100nF 10% 63V
2903 4822 124 22686 10μF 16V
2904 4822 124 42031 2.2μF 20% 25V3901 4822 051 10103 10k 2% 0.25W
3902 4822 050 25601 560Ω
3903 4822 051 10332 3k3 2% 0.25W
3904 4822 051 10104 100k 2% 0.25W
3905 4822 051 10104 100k 2% 0.25W
3906 4822 051 10332 3k3 2% 0.25W
3907 4822 051 10103 10k 2% 0.25W
3908 4822 051 10332 3k3 2% 0.25W
3910 4822 051 10273 27k 2% 0.25W
3911 4822 051 10103 10k 2% 0.25W
3912 4822 051 10103 10k 2% 0.25W
3913 4822 051 10273 27k 2% 0.25W
3914 4822 051 10103 10k 2% 0.25W
3915 4822 051 10273 27k 2% 0.25W
3916 4822 051 10103 10k 2% 0.25W
3917 4822 050 12002 2k 1% 0.4W
3918 4822 051 10103 10k 2% 0.25W
3919 4822 101 11003 220k 30% 0.1W
3920 4822 050 24702 4k7
3921 4822 051 10273 27k 2% 0.25W
3922 4822 100 11163 100k 30% LIN 0.1W
3923 4822 101 11003 220k 30% 0.1W
3924 4822 105 11023 1k 30% 0.1W
3925 4822 100 11213 22k 30%
3926 4822 101 11003 220k 30% 0.1W
3928 4822 051 10103 10k 2% 0.25W
3929 4822 050 12203 22k 1% 0.4W
3930 4822 051 10273 27k 2% 0.25W
3931 4822 051 10154 150k 2% 0.25W
3932 4822 050 22105 2M 1 1% 0.6W
3934 4822 051 10332 3k3 2% 0.25W6901 4822 130 34233 BZX79-F5V1
6902 4822 130 30621 1N4148
6903 4822 130 30621 1N41487901 4822 209 80775 NE555N
7902 4822 130 44196 BC548C
7903 4822 130 44196 BC548C

7904	4822 130 44196	BC548C
7905	4822 130 44196	BC548C
7906	4822 130 44196	BC548C
7907	5322 130 60068	BC558C
7908	4822 130 44196	BC548C
7909	4822 130 44196	BC548C
7910	4822 130 44196	BC548C

General

To be able to perform measurements and repairs on the "main circuit board", the unit should first place it in the service position.

The connection between the interface cable and the "video board" should then be extended by means of an extension cable 4822 321 61254 (Fig.4.1).

The power connection may be made in one of the following ways:

- A- Dismount the "EMI panel" and put it (isolated) aside the main panel.
- B- Connect the cable from the power socket directly to the connector M105 on the main panel (in this case the main switch is **not** operative !!).
- C- Use some of the extension cables (cable A) of the set 4822 321 60582 (Fig.4.2).



Fig. 4.1


Repair instructions

1. EMI panel.

- Remove the back cover with pedestal assy.
- Remove the cable tie.
- Remove the 2-pins connectors cables.
- Remove the metal screws and plastic screw.
- Remove the EMI-panel assy.

2. Video / CRT panel.


- Remove the back cover with pedestal assy.
- Remove Video/CRT-panel assy.
- De-solder and remove one ground lead.
- De-solder six soldering tags and remove the metal shielding.

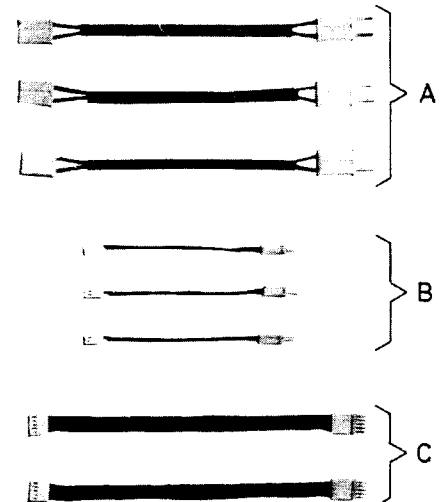


45 263 A11

Fig. 4.2

WIRING DIAGRAM

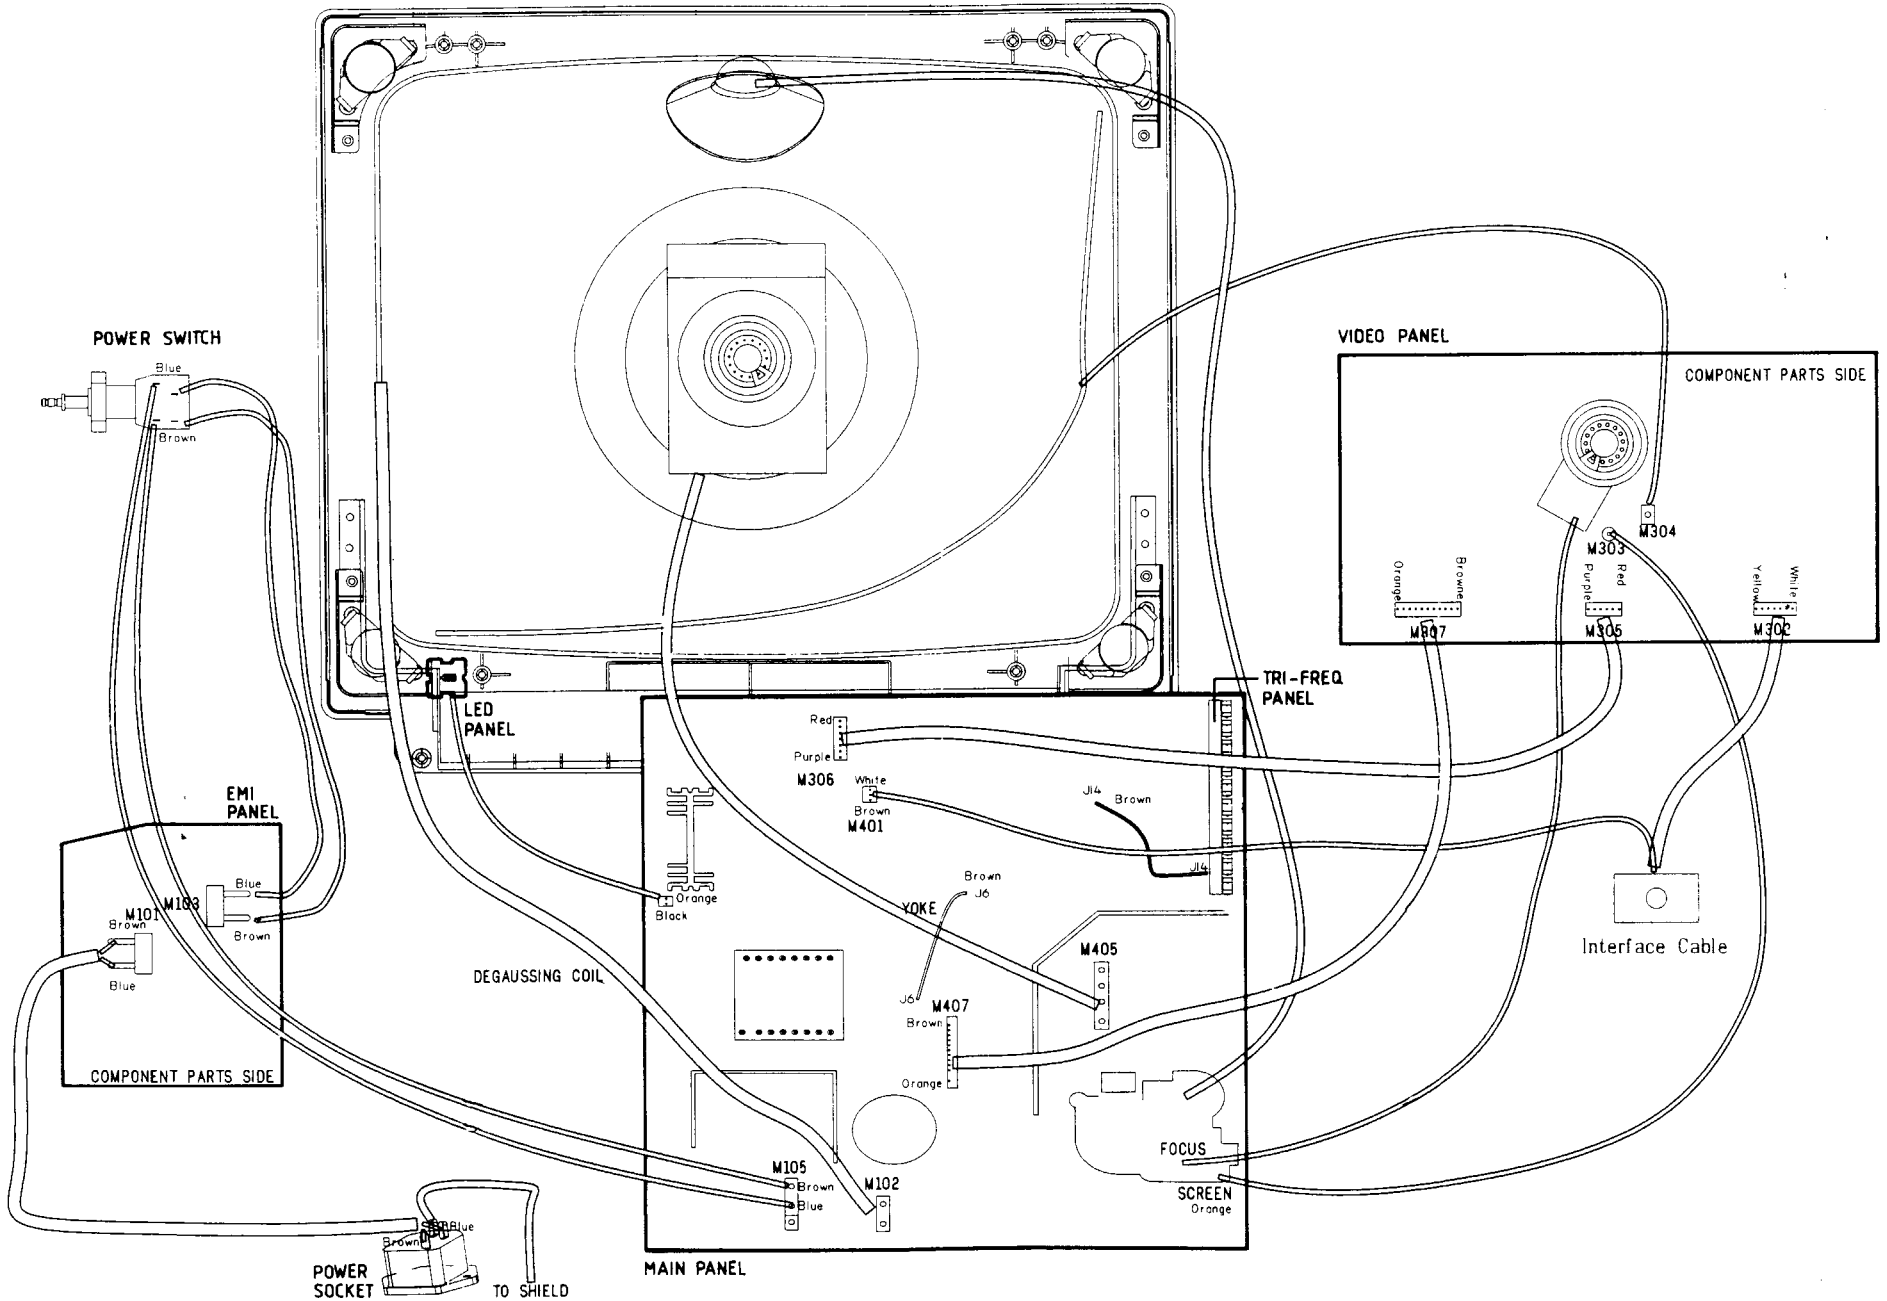













































VIDEO PCB BOARD (viewed from the component side)

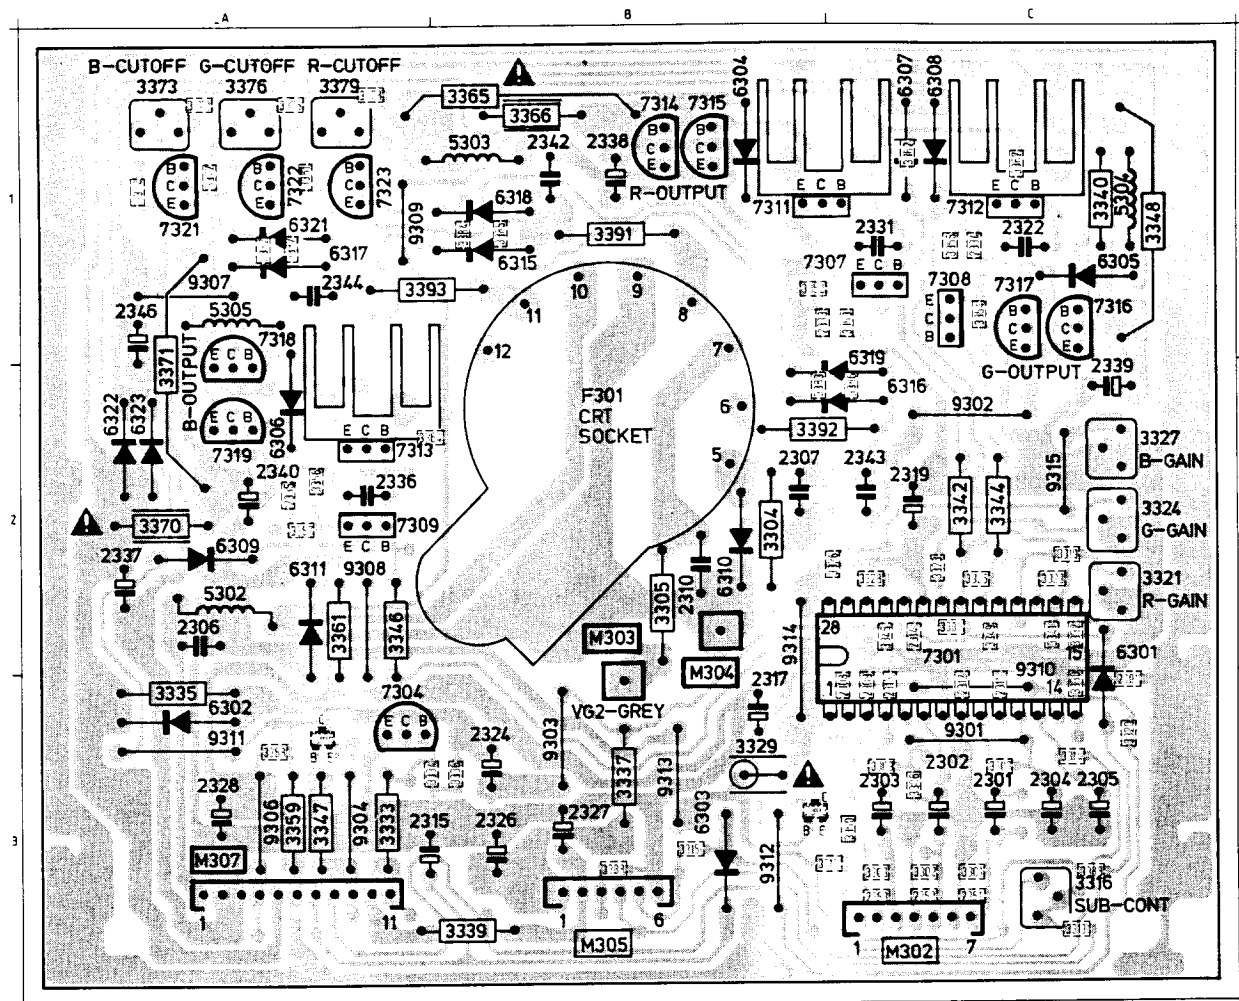

2257	A2	2310	B2	2326	B3	2339	C2	3301	C3	3314	C3	3329	B3	3340	C1	3352	C2	3364	A2	3376	A1	3391	B1	6304	B1	6317	A1	7307	C1	7318	A1	9307	A1	F301	B2		
2301	C3	2311	C3	2327	C3	2340	A2	3302	C3	3315	B3	3330	C2	3341	C2	3353	C1	3365	B1	3377	A1	3392	B2	6305	C1	6318	B1	7308	C1	7319	A2	9308	A2	M302	C3		
2302	C3	2312	C3	2328	A3	2342	B1	3303	C3	3316	B3	3331	C2	3342	C2	3354	C1	3366	B1	3378	A1	3393	A1	6306	A2	6319	C2	7309	A2	7321	A1	9309	A1	M303	B2		
2303	C3	2313	C2	2331	C1	2343	C2	3304	B2	3318	B3	3332	C2	3344	C2	3354	A2	3367	C1	3379	A1	3394	B1	6307	B1	6308	C1	6322	A2	7312	C1	7323	A1	9310	C2	M304	B3
2304	C3	2314	C2	2333	B1	2344	A1	3305	B2	3320	C2	3333	A3	3346	A2	3355	C1	3370	A1	3382	A1	3395	C1	6308	A2	6323	A2	7313	A2	9301	C3	9312	B3	M305	A3		
2305	C3	2315	A3	2334	C1	2346	A1	3306	C3	3321	C3	3334	A3	3347	A3	3356	A2	3371	A1	3383	B2	3396	C1	6309	A2	6324	A2	7314	A2	9302	C2	9313	B3	M306	B3		
2306	A2	2317	B3	2335	A2	2351	C3	3307	C3	3323	C2	3335	A3	3348	C1	3358	A3	3372	A1	3384	C2	3397	A1	6310	B2	7301	C2	7314	B1	9302	C2	9313	B3	M307	B3		
2307	B2	2319	C2	2336	A2	2352	C3	3309	C3	3324	C2	3336	B3	3349	C2	3359	A3	3373	A1	3386	B2	6301	C2	6311	A2	7303	B3	7315	B1	9303	B3	9314	B2	M308	B2		
2308	C3	2322	C1	2337	A2	2353	C3	3310	C3	3327	C2	3337	B3	3350	C3	3361	A2	3374	A1	3387	A1	6302	A3	6315	B1	7304	A3	7316	C1	9304	A3	9314	B2	M309	B3		
2309	C3	2324	B3	2338	B1	2391	C3	3313	C3	3328	C2	3339	B3	3352	B1	3362	C1	3375	A1	3388	C3	6303	A3	6316	C2	7306	A3	7317	C1	9306	A3	9315	C2	M310	A3		


Electrical diagrams and P.C.B. lay-outs

WAVE FORMS

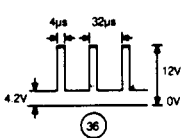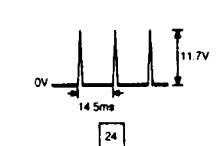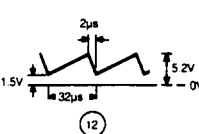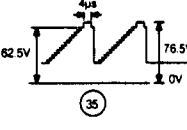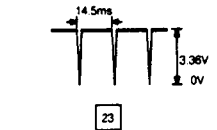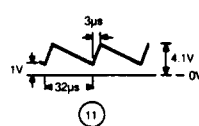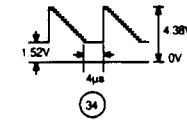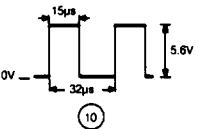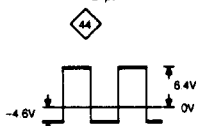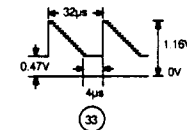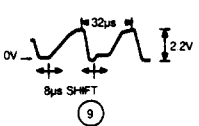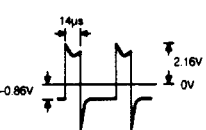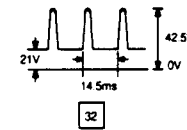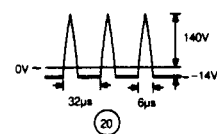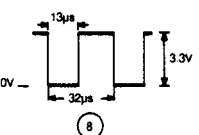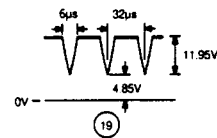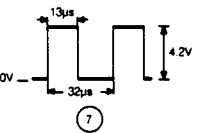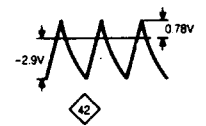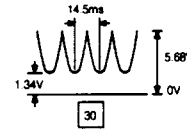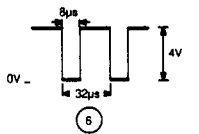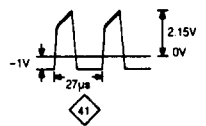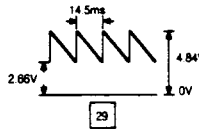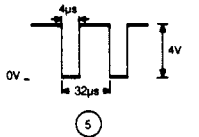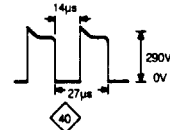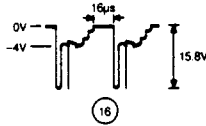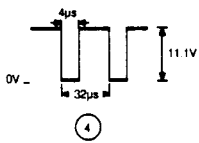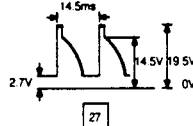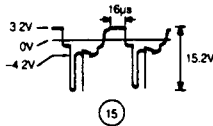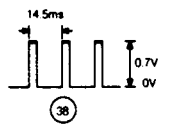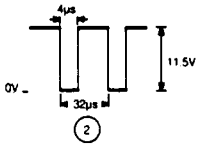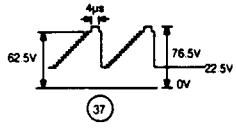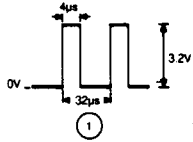

- LINE FREQUENCY
- FRAME FREQUENCY
- ◇ SUPPLY

MAIN PCB BOARD
(viewed from the component side)

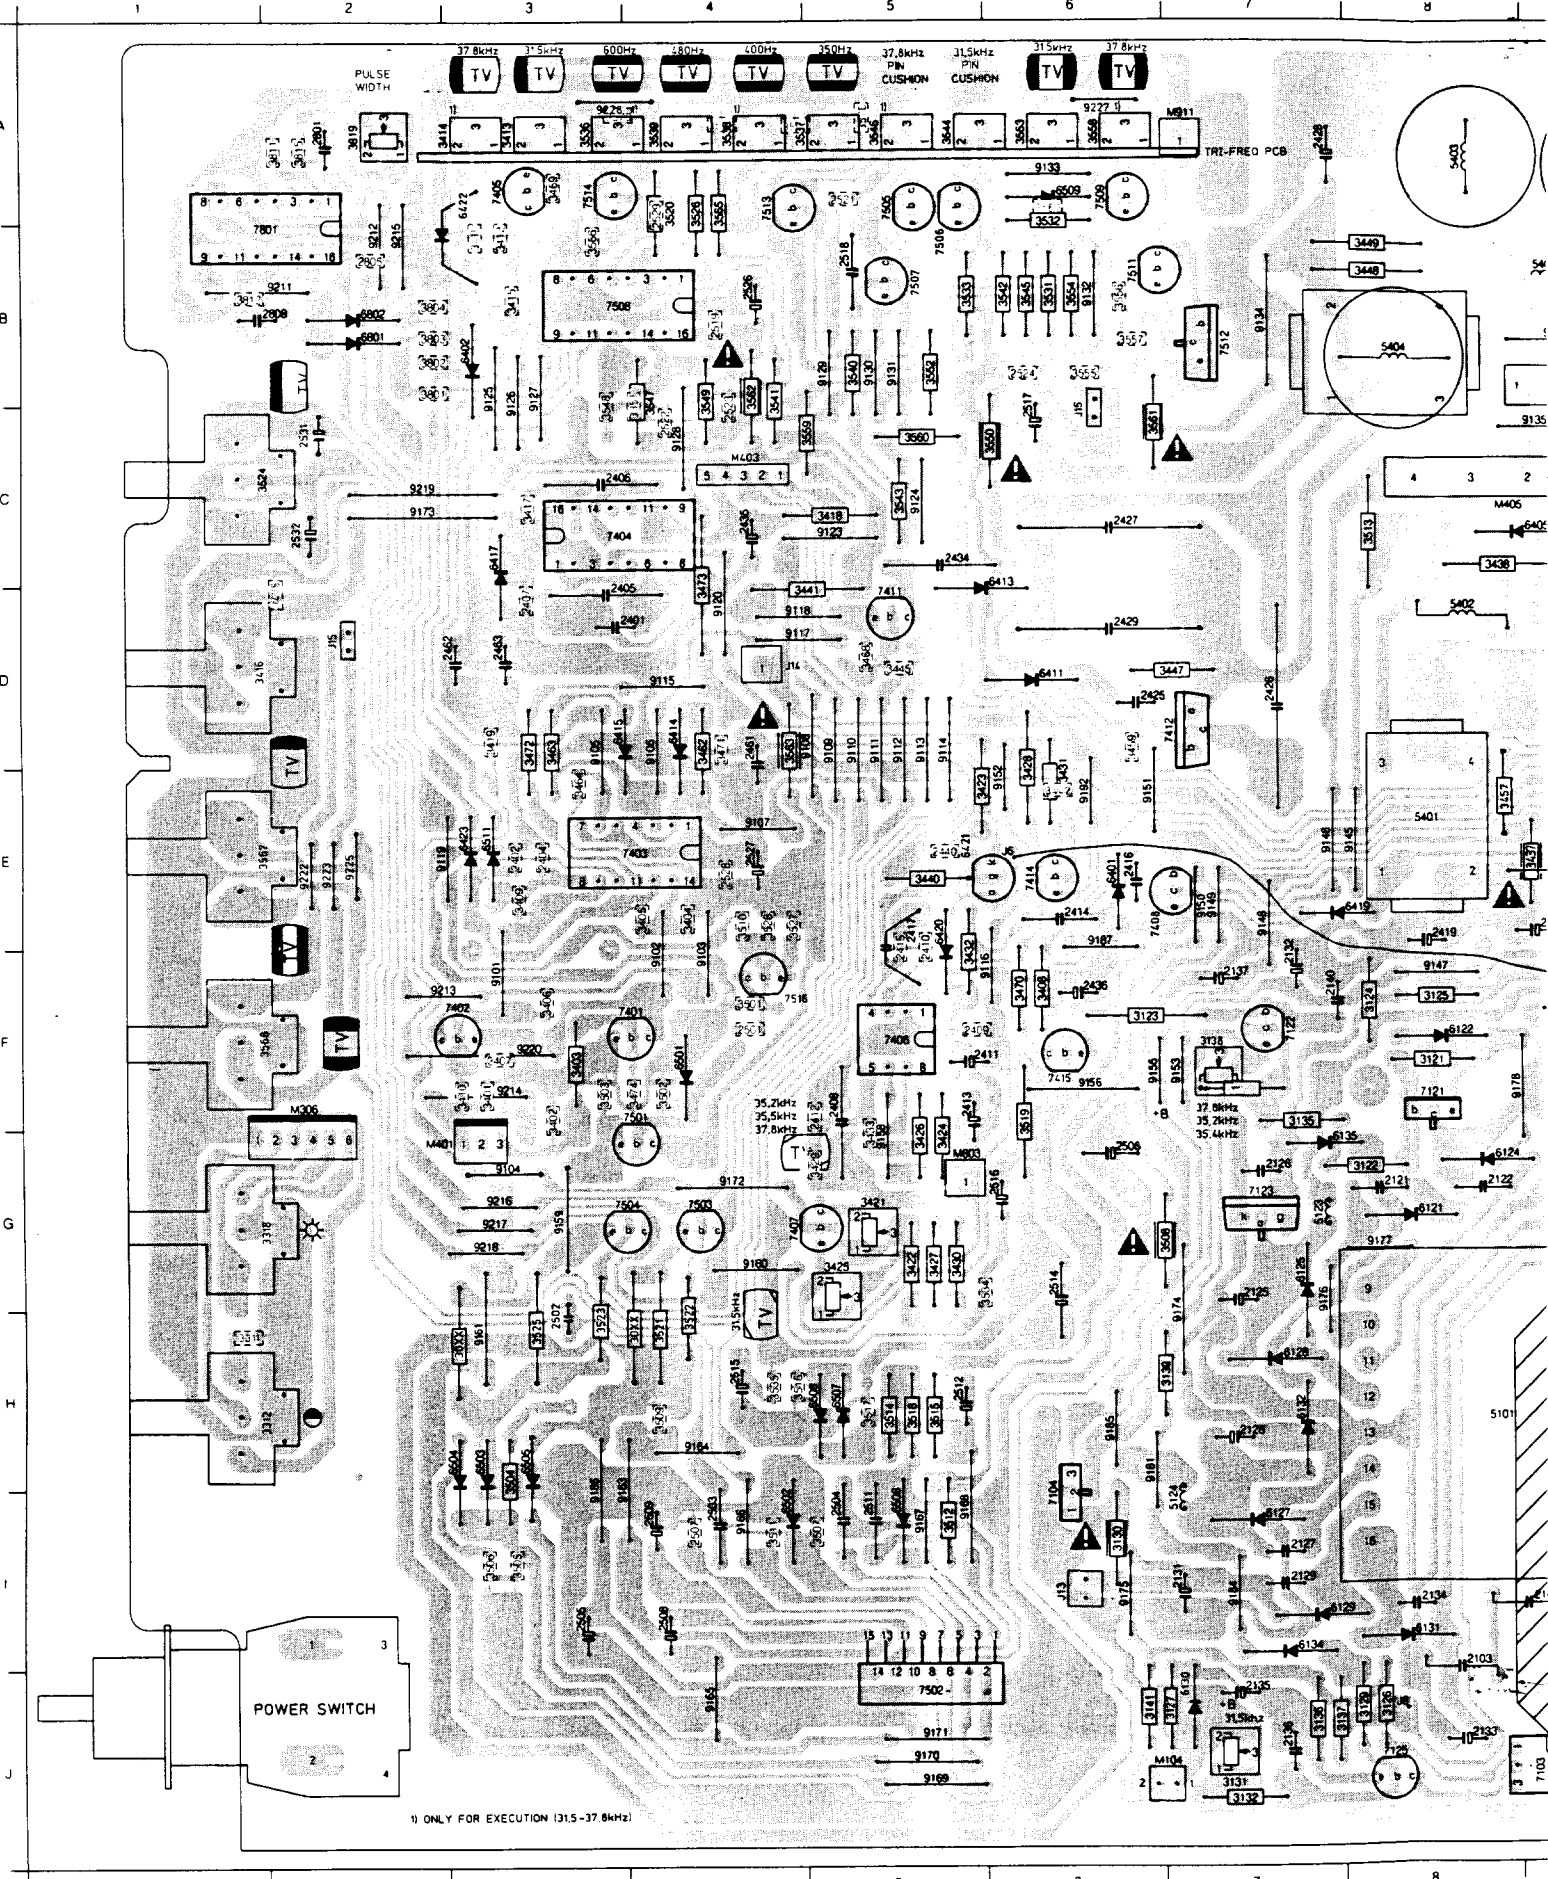

1) ONLY FOR EXECUTION (315-37.8kHz)

LOCATION OF ADJUSTING COMPONENTS

PARAGRAPH REFERENCE
↓

← PARAGRAPH REFERENCE
↓

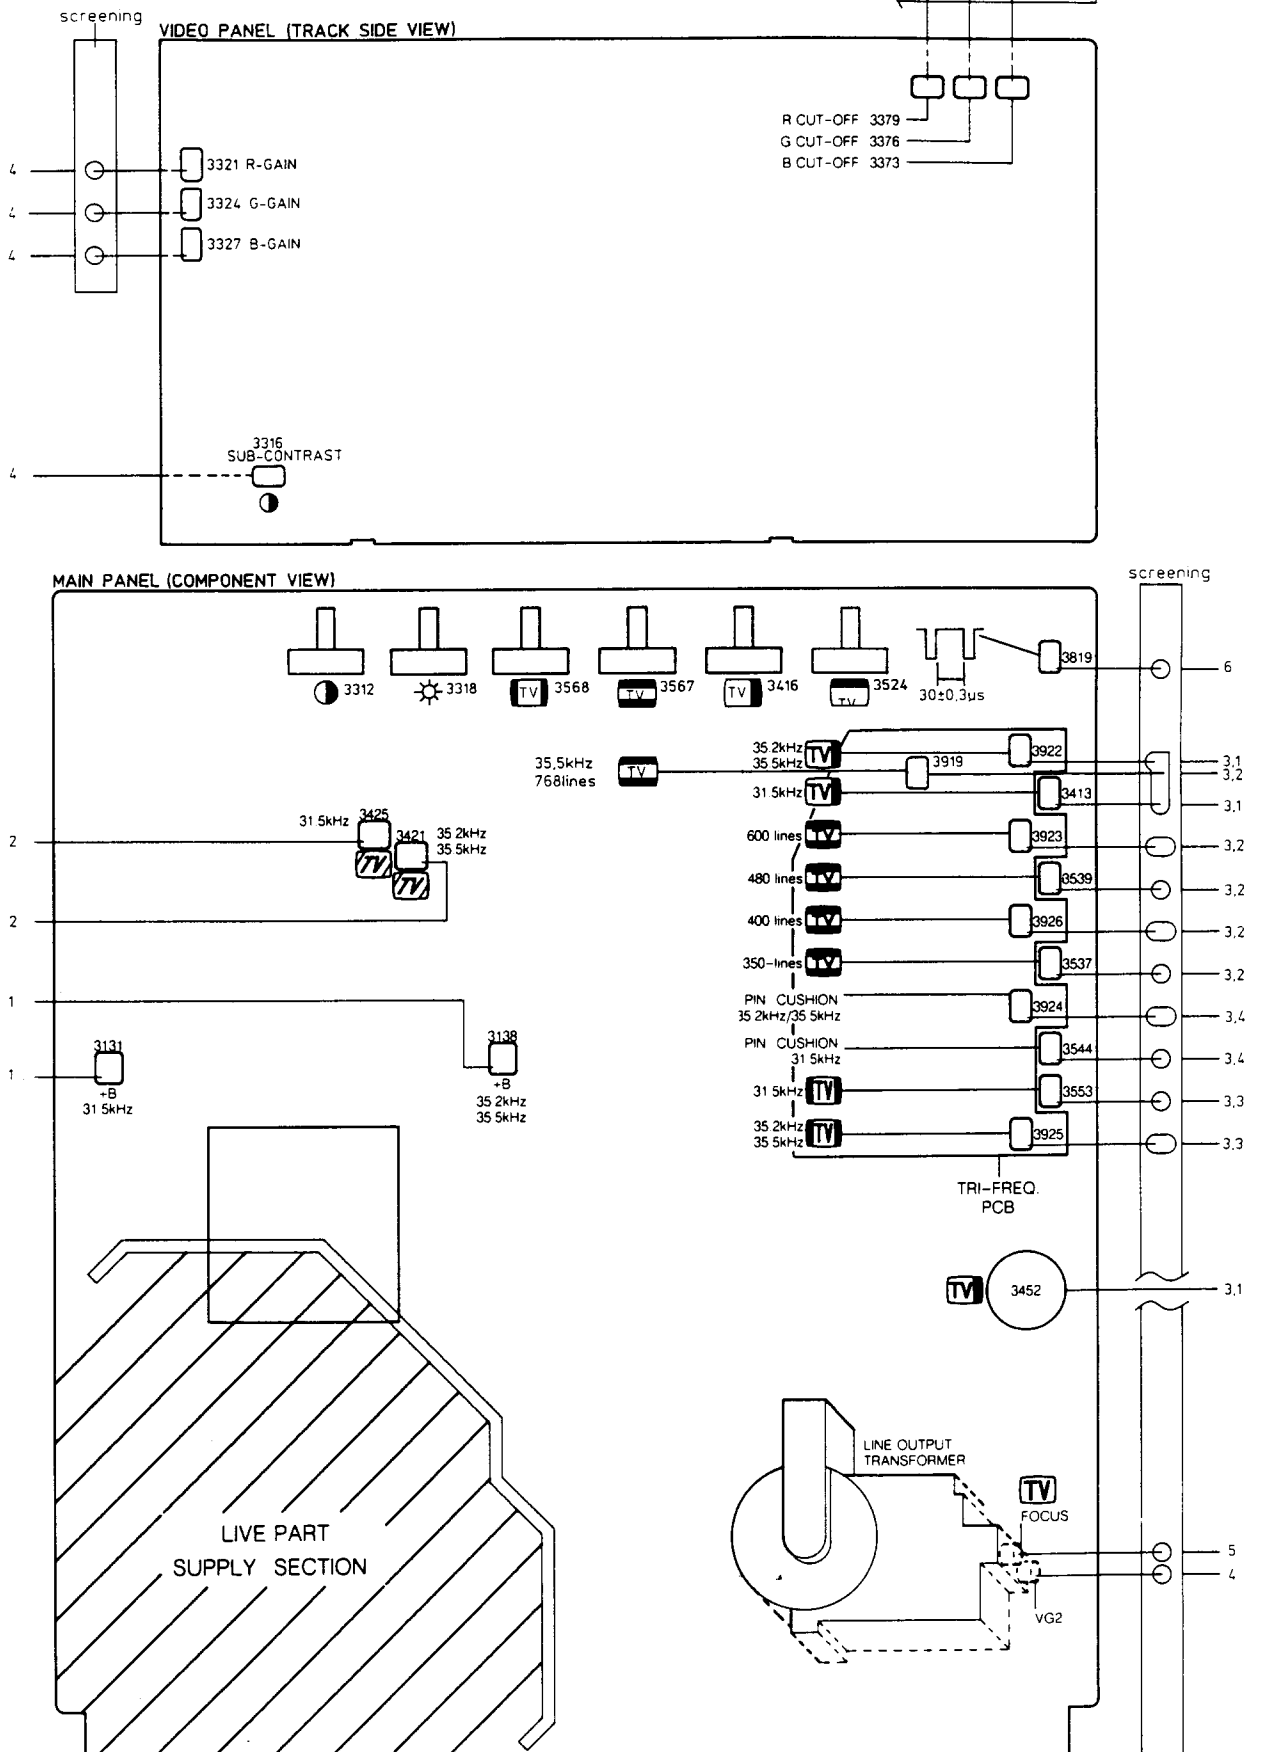


Fig.7.1

45558C

Repair tips

1. Servicing of SMDs (Surface Mounted Devices)

1.1 General cautions on handling and storage

- Oxidation on the terminals of SMDs results in poor soldering. Do not handle SMDs with bare hands.
- Avoid using storage places that are sensitive to oxidation such as places with sulphur or chlorine gas, direct sunlight, high temperatures or a high degree of humidity.
The capacitance or resistance value of the SMDs may be affected by this.
- Rough handling of circuit boards containing SMDs may cause damage to the components as well as the circuit boards. Circuit boards containing SMDs should never be bent or flexed. Different circuit board materials expand and contract at different rates when heated or cooled and the components and/or solder connections may be damaged due to the stress. Never rub or scrape chip components as this may cause the value of the component to change. Similarly, do not slide the circuit board across any surface.

1.2. Removal of SMDs

- Heat the solder (for 2-3 seconds) at each terminal of the chip. By means of litz wire and a slight horizontal force, small components can be removed with the soldering iron. They can also be removed with a solder sucker (see Fig. 8.1A) or:
- While holding the SMD with a pair of tweezers, take it off gently using the soldering iron's heat applied to each terminal (see Fig. 8.1B).
- Remove the excess solder on the solder lands by means of litz wire or a solder sucker (see Fig. 8.1C).

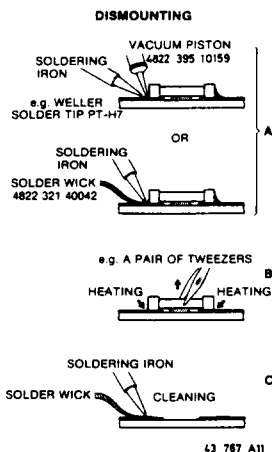


Fig. 8.1

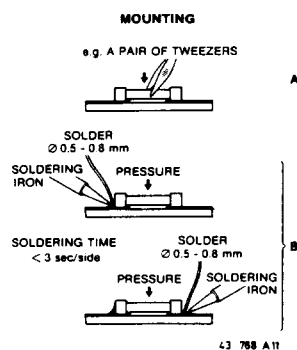


Fig. 8.2

Caution on removal:

- When handling the soldering iron, use suitable pressure and be careful.
- When removing the chip, do not use undue force with the pair of tweezers.
- The soldering iron to be used (approx. 30 W) should preferably be equipped with a thermal control (soldering temperature: 225 to 250°C).
- The chip, once removed, must **never** be reused.

1.3 Attachment of SMDs

- Locate the SMD on the solder lands by means of tweezers and solder the component on one side. Ensure that the component is positioned correctly on the solder lands (see Fig. 8.2A).
- Next complete the soldering of the terminals of the component (see Fig. 8.2B).

Caution when attaching SMDs:

- When soldering the SMD terminals, do not touch them directly with the soldering iron. The soldering should be done as quickly as possible; care must be taken to avoid damage to the terminals of the SMDs themselves.
- Keep the SMD's body in contact with the printed board when soldering.
- The soldering iron to be used (approx. 30 W) should preferably be equipped with a thermal control (soldering temperature: 225 to 250°C).
- Soldering should not be done outside the solder land.
- Soldering flux (of rosin) may be used, but should not be acidic.
- After soldering, let the SMD cool down gradually at room temperature.
- The quantity of solder must be proportional to the size of the solder land. If the quantity is too great, the SMD might crack or the solder lands might be torn loose from the printed board (see Fig. 8.3).



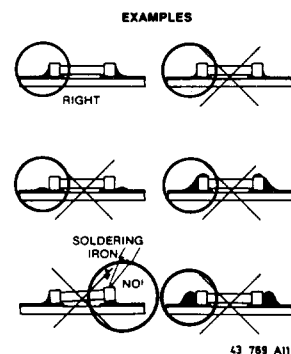



Fig. 8.3

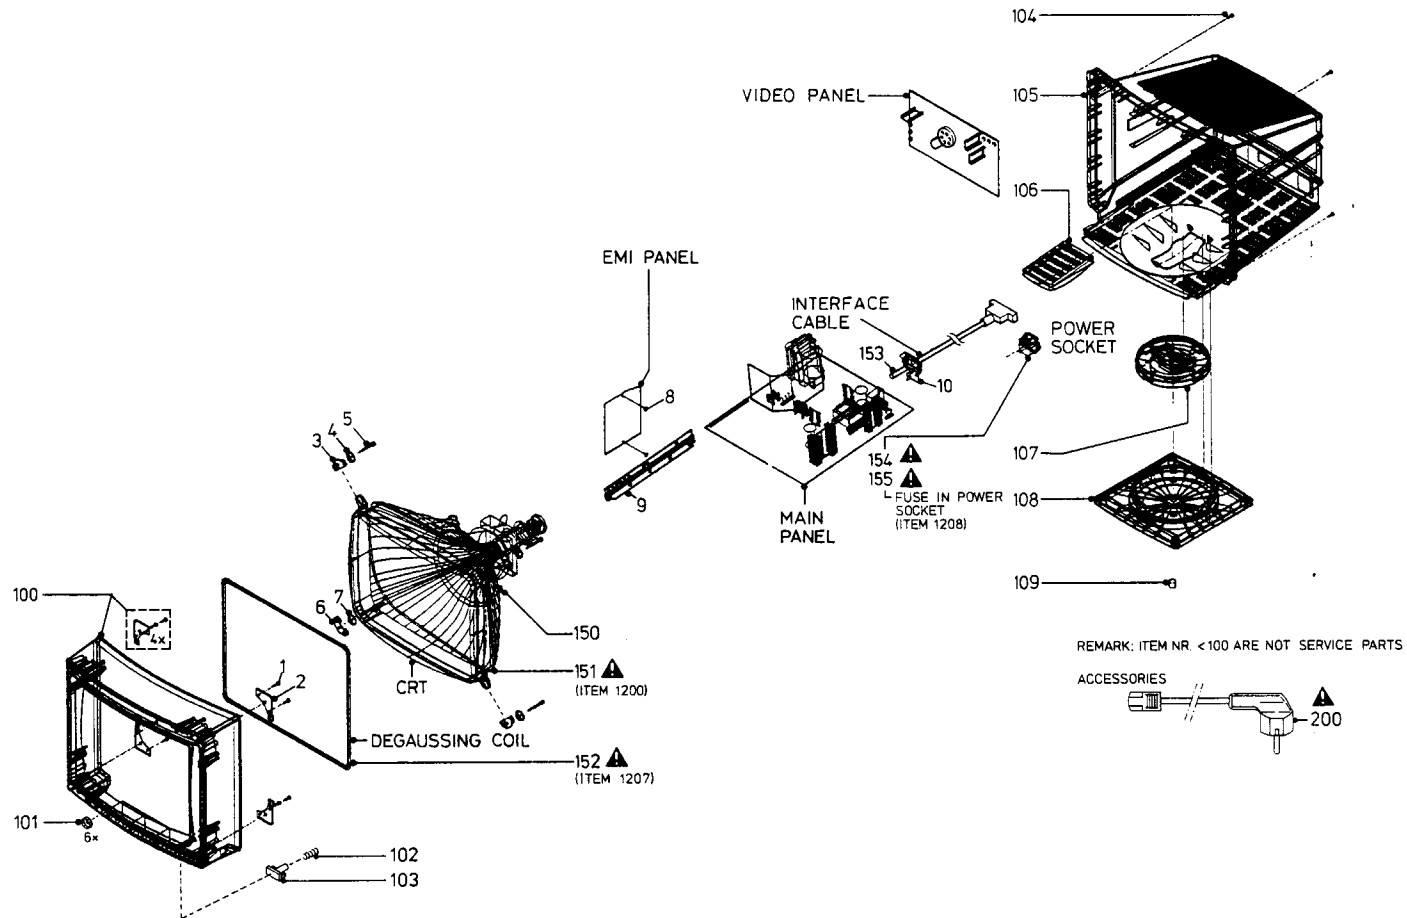


TRI-FREQ PCB BOARD

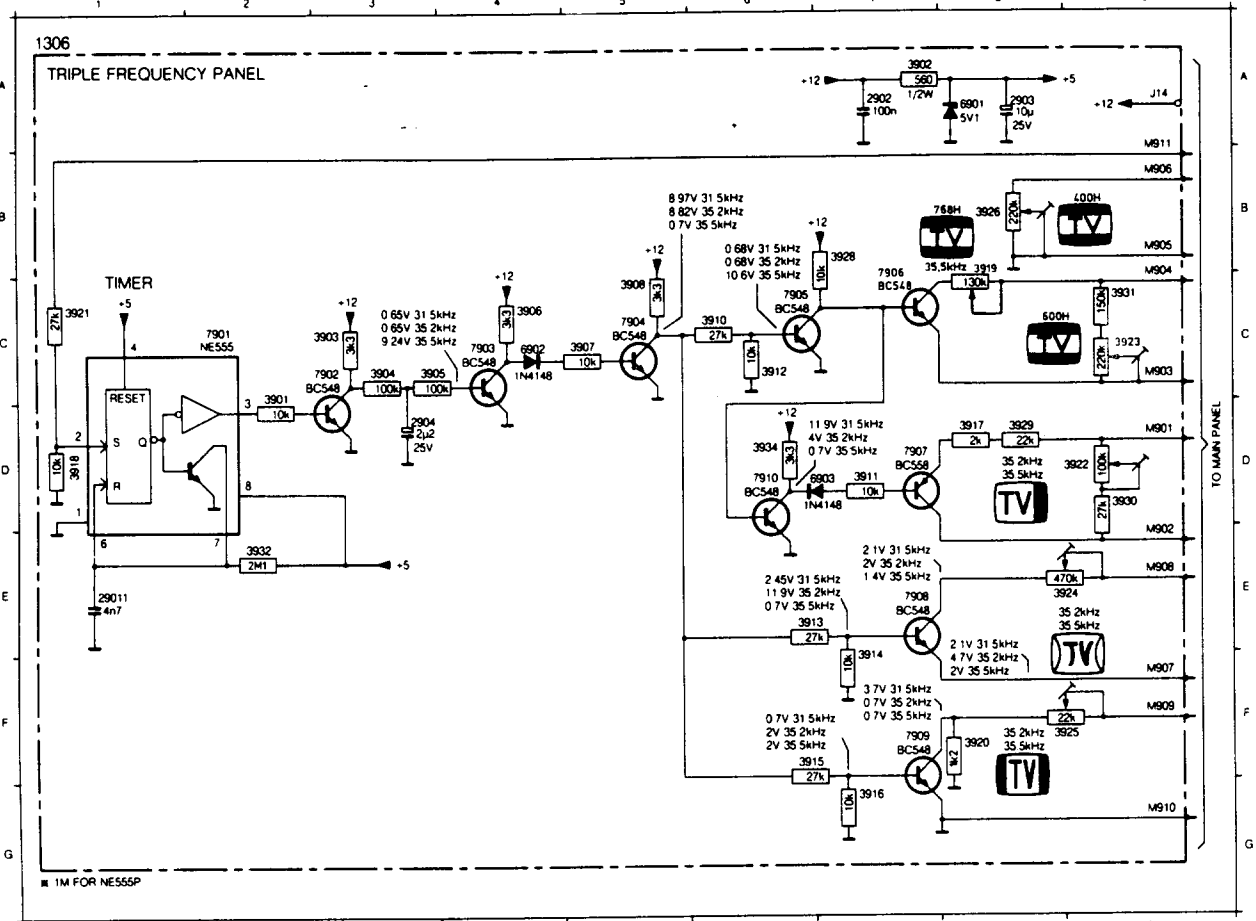


- 1306 A1
- 2901 E1
- 2902 A7
- 2903 A8
- 2904 D3
- 2905 C2
- 2906 C3
- 2907 C4
- 2908 C5
- 2909 C6
- 2910 D7
- 2911 D8
- 2912 C6
- 2913 E7
- 2914 F7
- 2915 F7
- 2916 G7
- 2917 D8
- 2918 D1
- 2919 B8
- 2920 F8
- 2921 C1
- 2922 D9
- 2923 C9
- 2924 E9
- 2925 F9
- 2926 B8
- 2927 D8
- 2928 D8
- 2929 D8
- 2930 D9
- 2931 C9
- 2932 E2
- 2933 D6
- 2934 D6
- 2935 A8
- 2936 C4
- 2937 D7
- 2938 E7
- 2939 E7
- 2940 F7
- 2941 D6

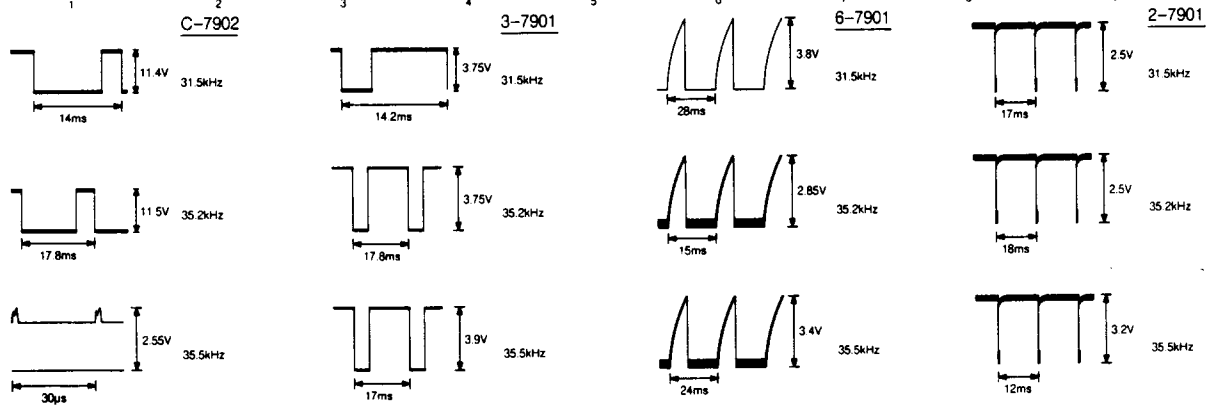

TRI-FREQ PCB (SMD EXECUTION)



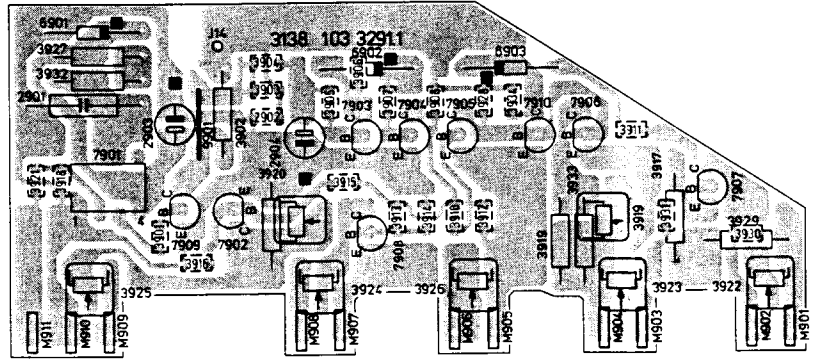


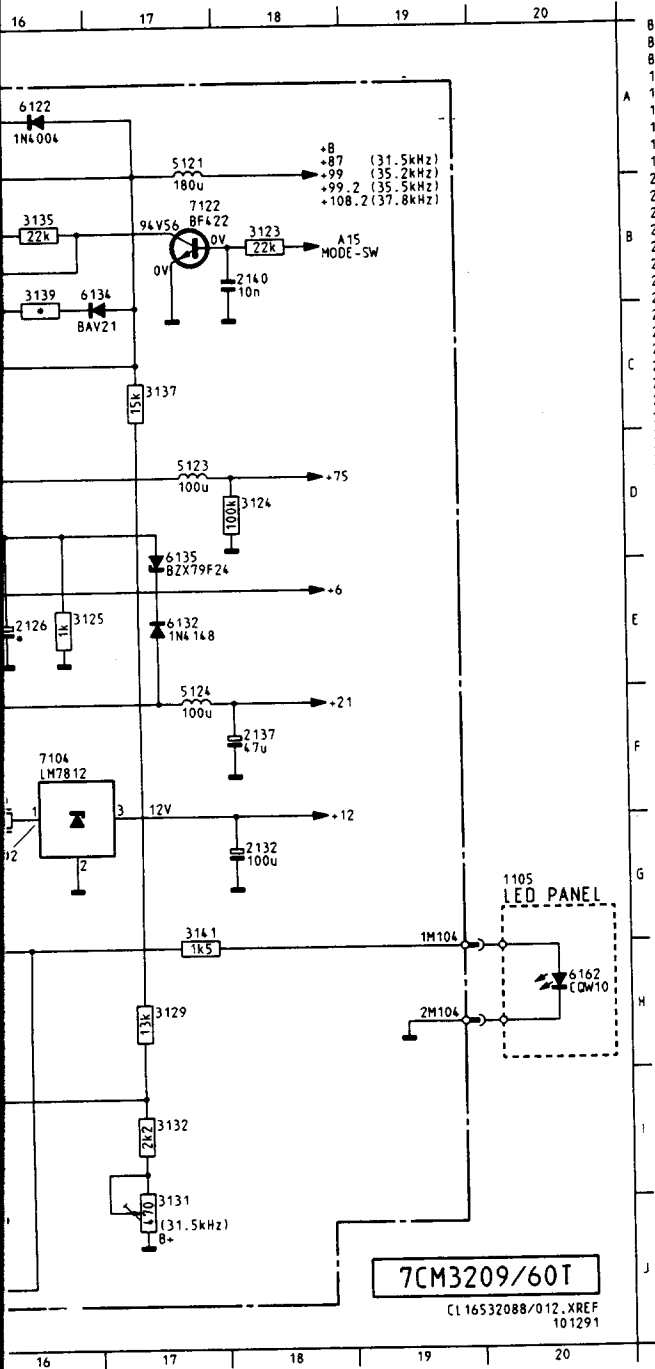

7CM3209/60T
 Cl 16532088/012.XREF
 101291


BC33	E11	3132	I17
BC33	E11	3135	B16
BD43	D11	3136	H15
1101	A 7	3137	C17
1105	G20	3138	B16
1106	A 2	3139	B16
1110	D 5	3141	G17
1207	I 6	3150	B 9
1208	A 1	3151	H11
2102	I13	3152	E12
2103	I13	3153	D12
2104	J 8	3154	C 9
2108	B11	3155	E10
2109	B12	3181	C 3
2111	H10	3182	D 3
2112	D13	3186	B 3
2113	D 9	5101	A13
2114	I12	5101	G 8
2115	F10	5102	B 4
2116	B11	5104	D11
2117	H10	5105	B 5
2121	A14	5121	A17
2122	C14	5123	D17
2123	C15	5124	F17
2125	D15	6101	A10
2126	E16	6102	B10
2127	F14	6103	B 9
2128	F15	6104	A 9
2129	G14	6105	G 9
2131	G15	6106	C13
2132	G18	6107	C13
2133	E15	6108	D 9
2134	E14	6109	D12
2135	J14	6110	D 9
2136	I15	6111	E 9
2137	F18	6114	F 9
2140	B18	6115	G12
2182	D 3	6116	I10
2183	B 3	6117	D12
2186	B 4	6121	A14
2188	B 4	6122	A16
2189	B 5	6124	C14
3101	I 8	6125	D14
3102	A 9	6127	F14
3103	B12	6128	D14
3104	C12	6129	F14
3105	B12	6130	J15
3106	D 9	6131	E14
3107	E12	6132	E17
3108	E13	6134	B17
3109	E13	6135	E17
3110	D13	6162	H20
3111	H13	6181	D 4
3112	E 9	6182	D 3
3113	E 9	6183	C 3
3114	F 9	7101	C12
3115	H12	7103	H14
3117	G12	7104	F16
3118	H12	7105	H11
3119	I 9	7108	H11
3120	D10	7121	A15
3121	B15	7122	B17
3122	B16	7123	D15
3123	B18	7125	I14
3124	D18	7185	D 4
3125	E16	9176	B14
3126	G14	9177	B14
3127	I15	9183	D 8
3129	H17	9199	A 5
3130	F16	9200	B 5
3131	I17	9210	A 9

EMI PANEL

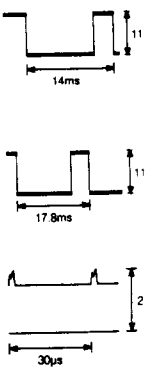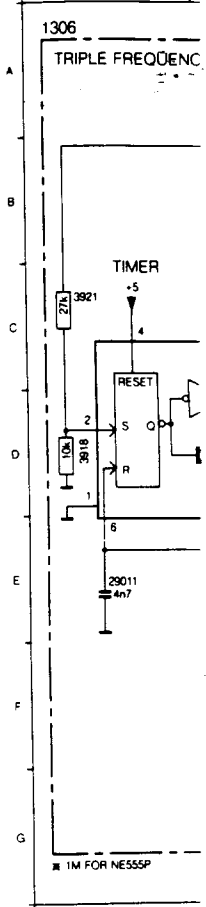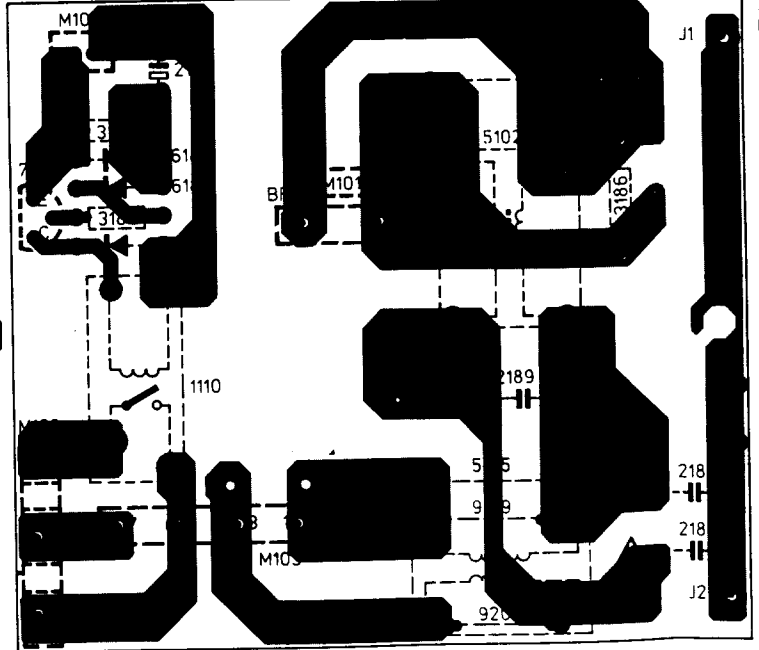


S1

POWER SUPPLY SCHEMATIC DIAGRAM

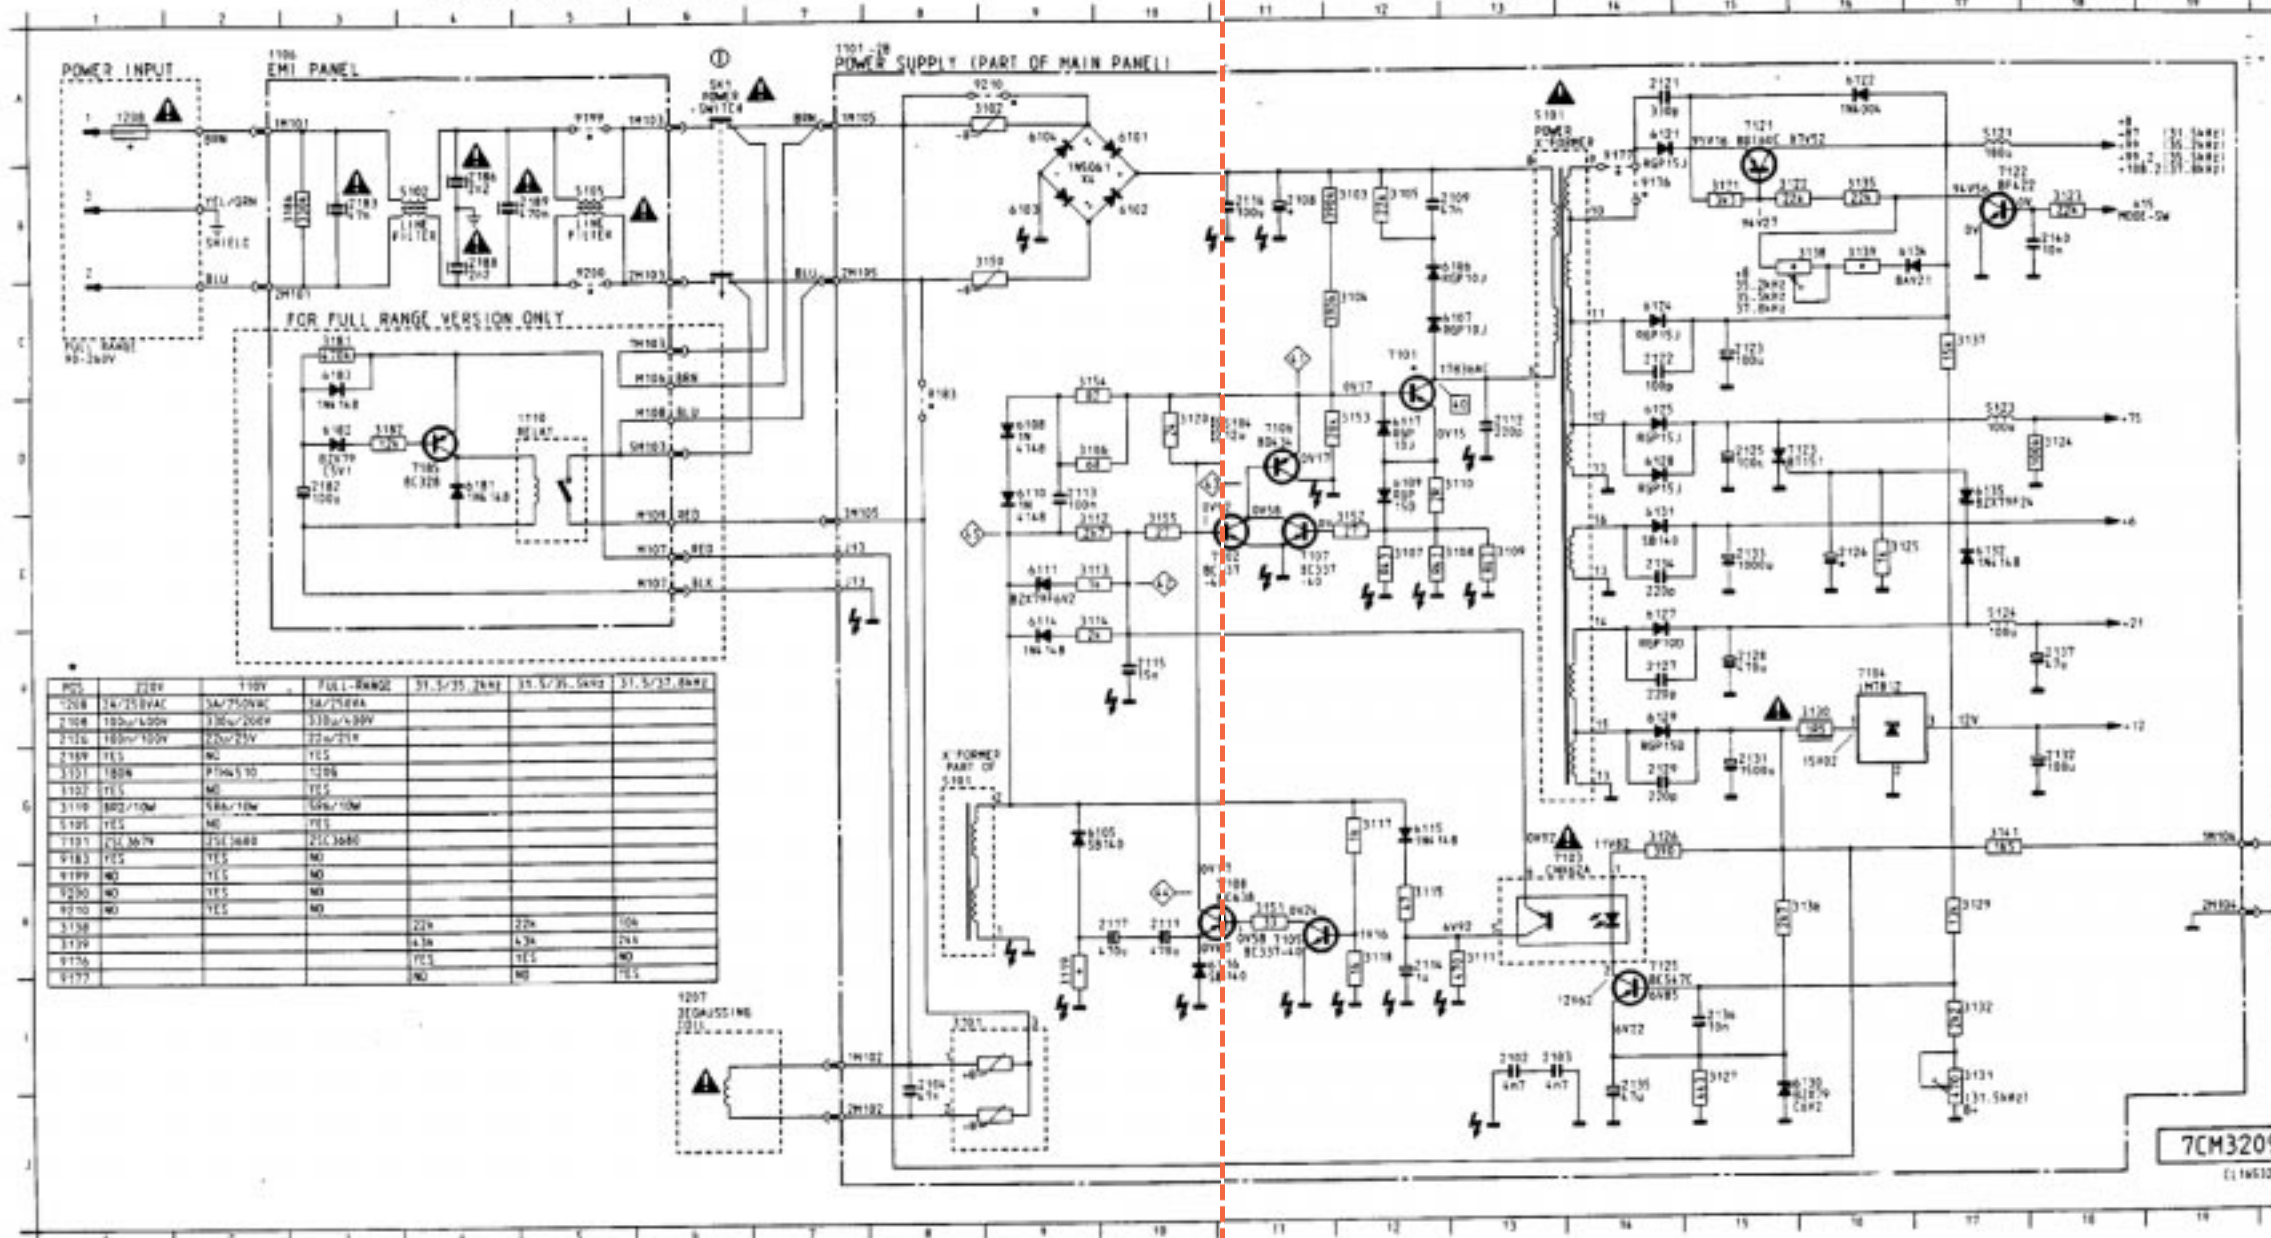

S2

LED PC BOARD (viewed from the component side)



GB REMARKS

The direct voltages and oscillograms are average voltages. They have been measured under the following


GB WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). System handling during repair may reduce life

ESD



POWER SUPPLY (PART OF MAIN PANEL)

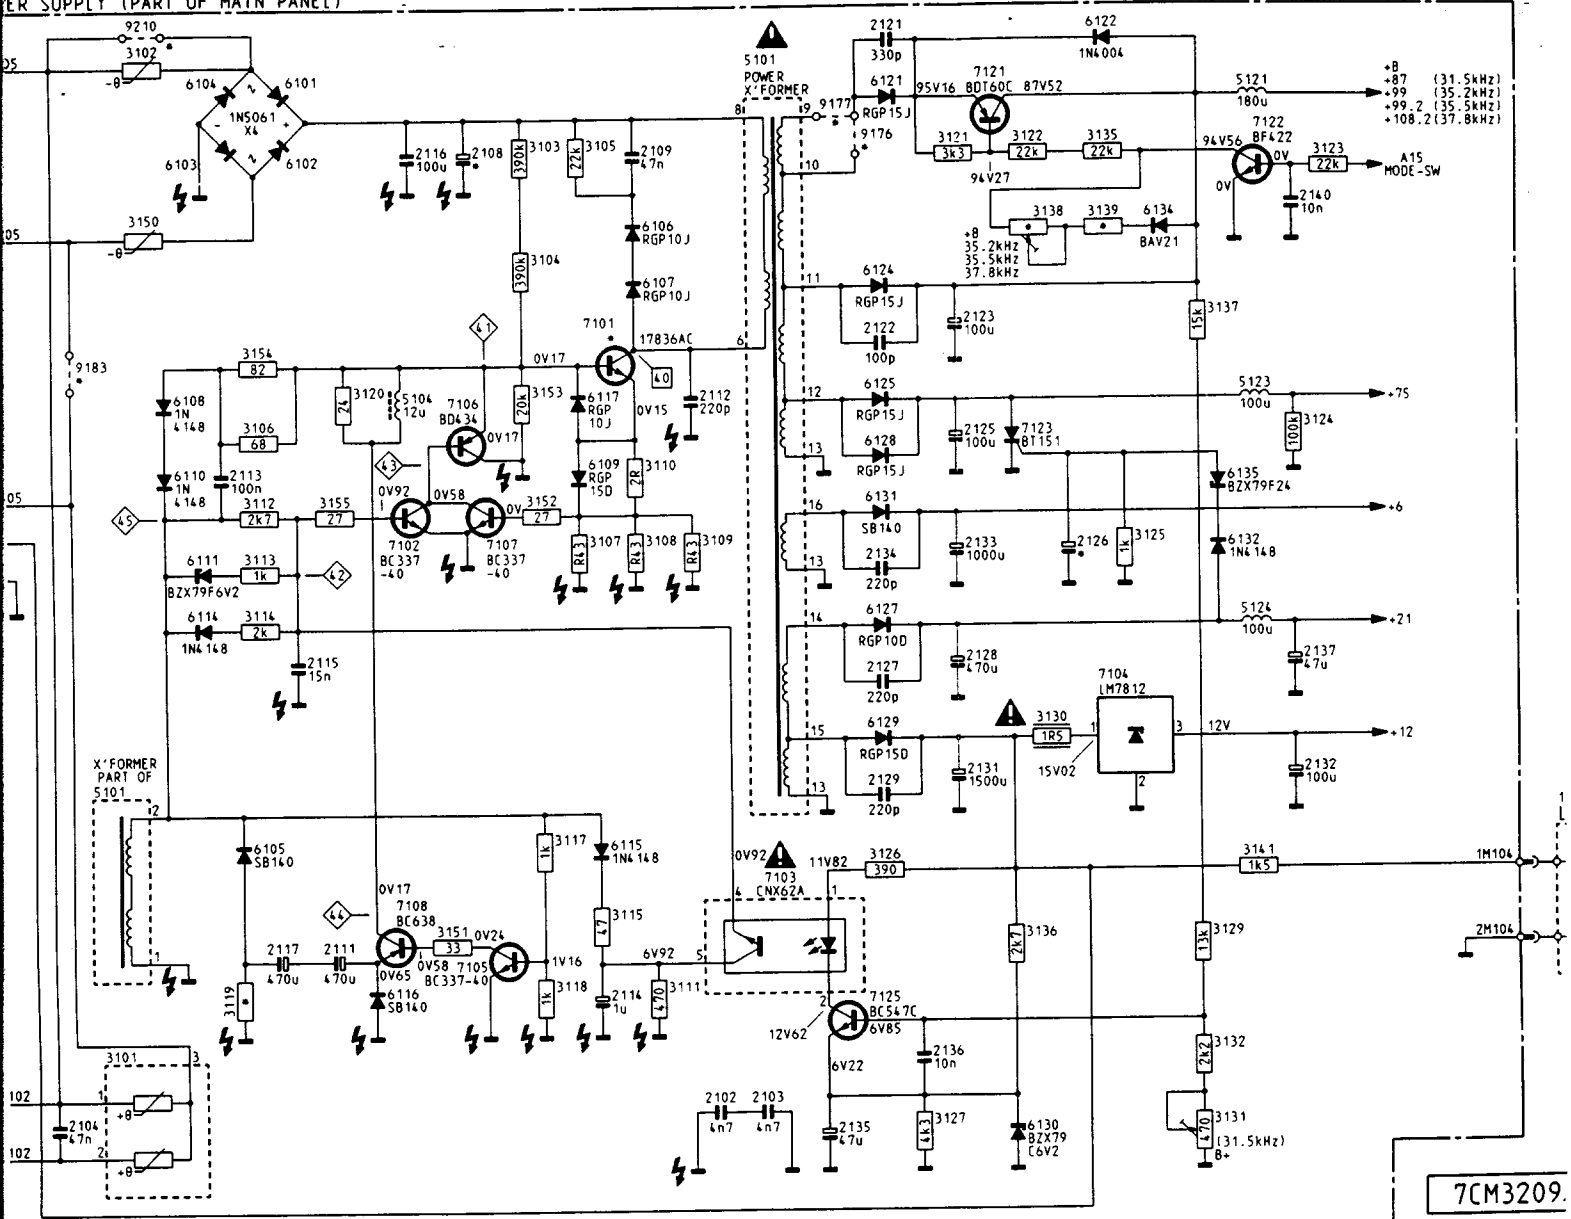

7CM3209
CL165320

(GB) WARNING

ESD




All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

Diagrams are average measured under the following


contrast for mechanical (i).

POWER SUPPLY SCHEMATIC DIAGRAM

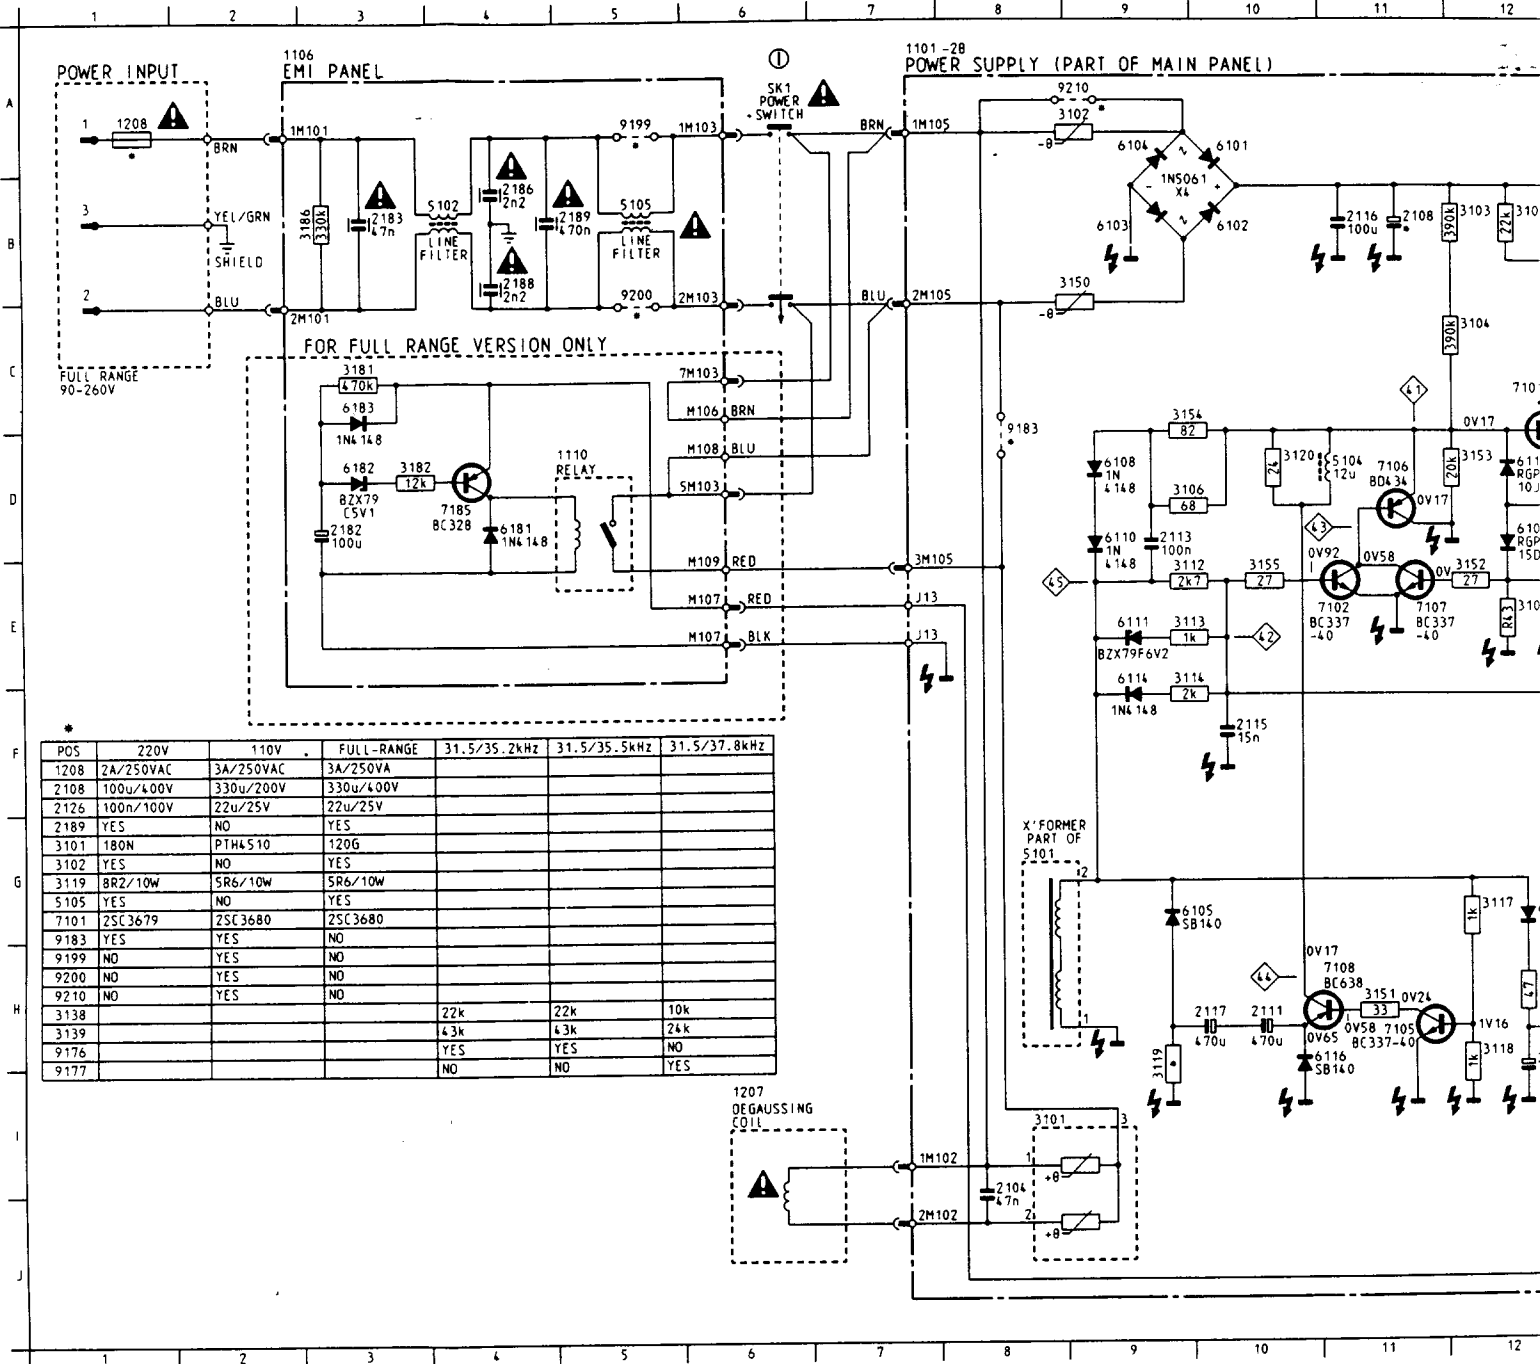

* POS	220V	110V	FULL-RANGE	31.5/35.2kHz	31.5/35.5kHz	31.5/37.8kHz
1208	2A/250VAC	3A/250VAC	3A/250VA			
2108	100u/400V	330u/200V	330u/400V			
2126	100n/100V	22u/25V	22u/25V			
2189	YES	NO	YES			
3101	180N	PTH4510	120G			
3102	YES	NO	YES			
3119	8R2/10W	SR6/10W	SR6/10W			
5105	YES	NO	YES			
7101	ZSC3679	ZSC3680	ZSC3680			
9183	YES	YES	NO			
9199	NO	YES	NO			
9200	NO	YES	NO			
9210	NO	YES	NO			
3138				22k	22k	10k
3139				4.3k	6.3k	24k
9176				YES	YES	NO
9177				NO	NO	YES

LED PC BOARD (viewed from the component side)

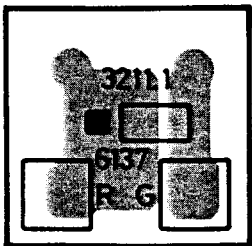

45 265 A11

(GB) REMARKS

The direct voltages and oscillograms are average voltages. They have been measured under the following conditions.


- Signal pattern: cross hatch
- Adjust brightness and contrast for mechanical mid-position (click position).

(GB) W

All ICs are susceptible. Careless handling is drastically reduced. When reconnected of the set, keep common potential.

S1


Electrical diagrams and P.C.B. lay-outs

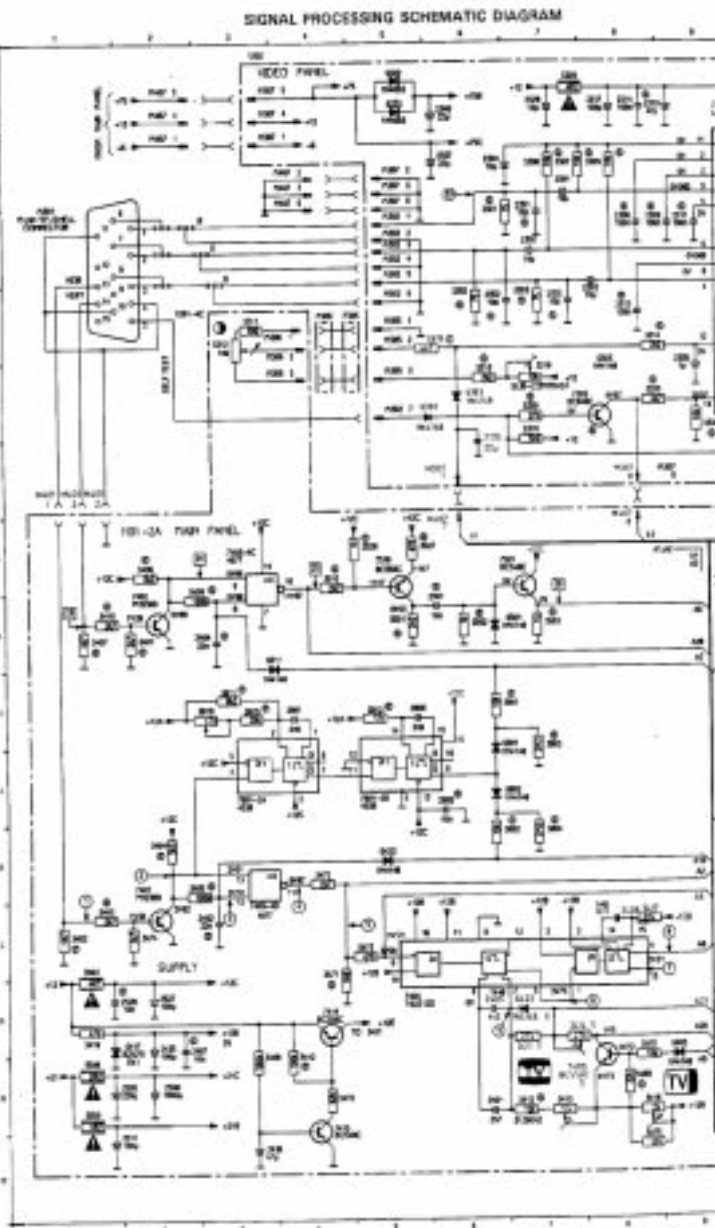

S2

7CM3205 TY 60 6.5 6.6 7CM3209 TY 60


Electrical diagrams and P.C.B. lay-outs

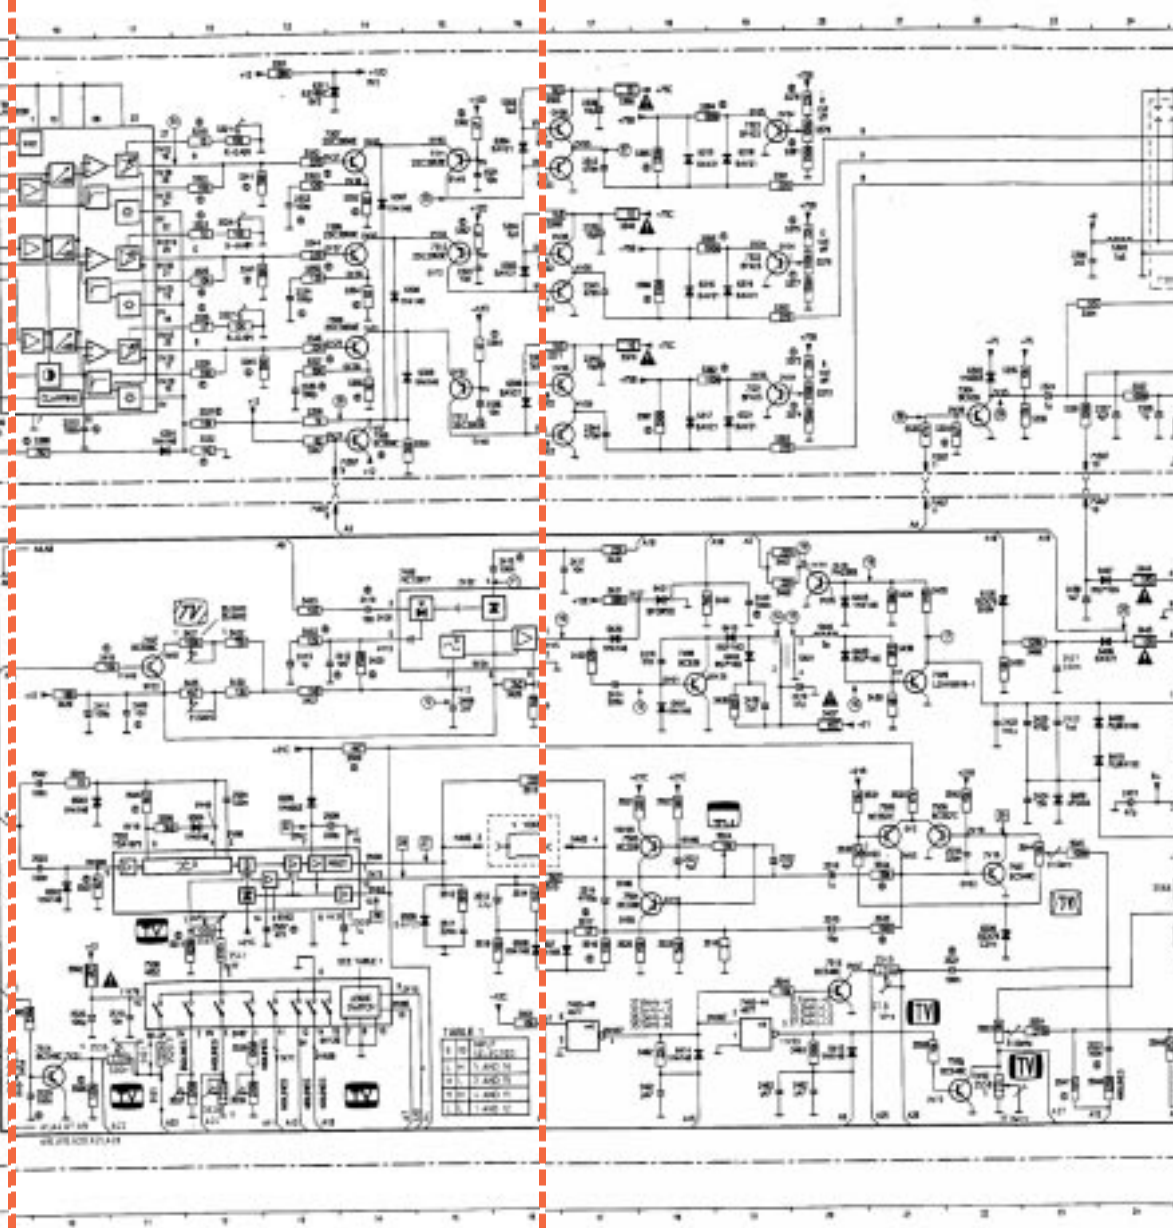

S3


S4

Electrical diagrams and P.C.B. lay-outs

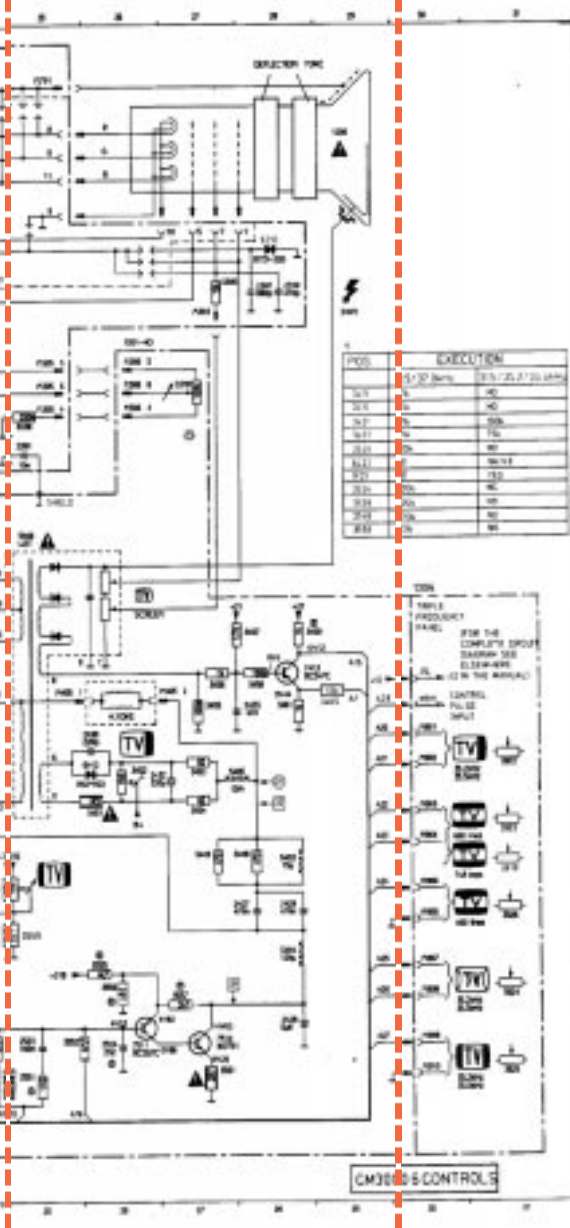


S5


7CM3209 TY 60 6.7

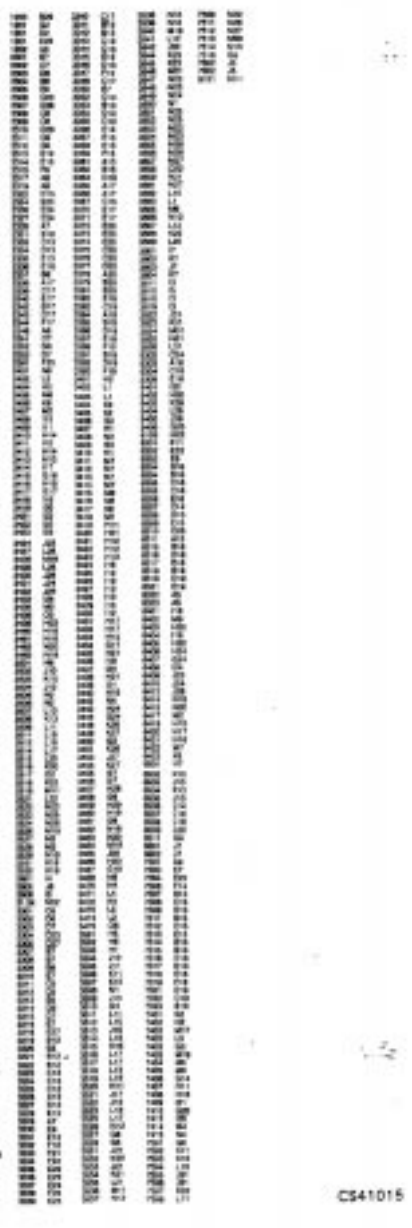

Electrical diagrams and P.C.B. lay-outs

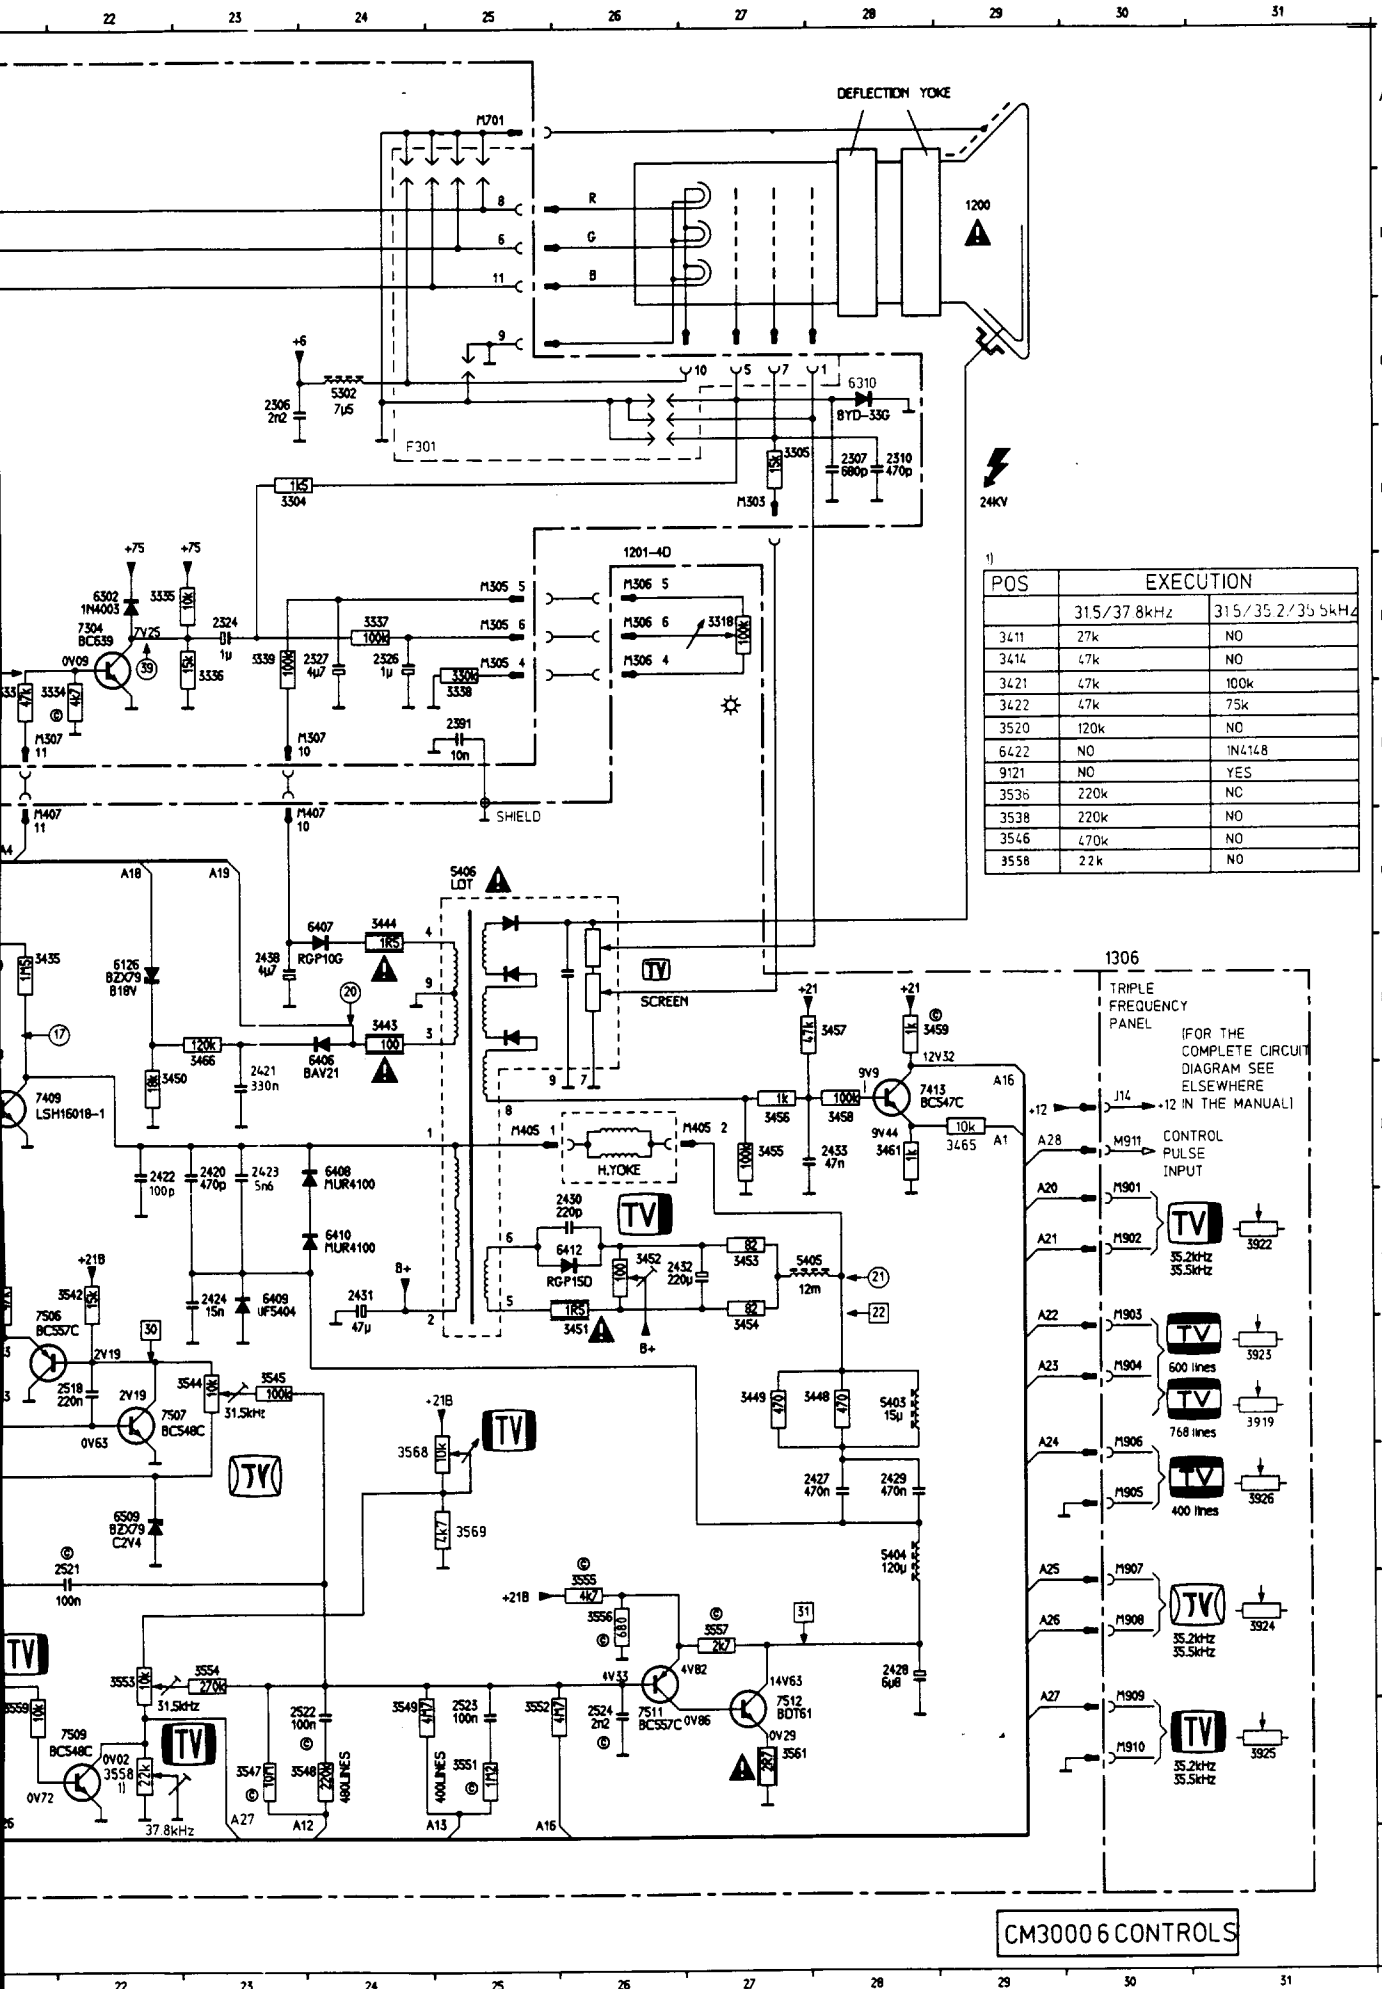

POS	EXECUTION	
	31.5/37.8kHz	31.5/35.2/35.5kHz
3411	27k	NO
3414	47k	NO
3421	47k	100k
3422	47k	75k
3520	120k	NO
6422	NO	1N4148
9121	NO	YES
2415	G18	3413
2416	H18	3414
3536	220k	NC
3538	220k	NO
3546	470k	NO
3558	2.2k	NO

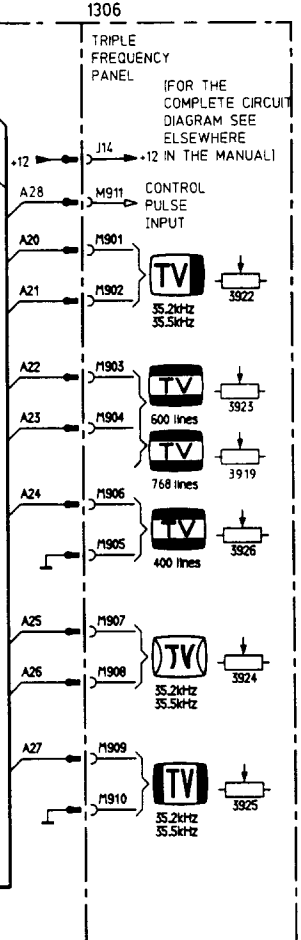

CM3000 6 CONTROLS

- 1200 B29 3340
- 1201 G2 3341
- 1202 D2 3342
- 1201 E26 3343
- 1202 AS 3344
- 2301 BT 3345
- 2302 C7 3346
- 2303 D8 3347
- 2304 B6 3348
- 2306 E9 3350
- 2306 C23 3352
- 2307 D28 3353
- 2306 C8 3354
- 2309 C8 3355
- 2310 D28 3356
- 2311 C8 3357
- 2312 D6 3358
- 2313 E10 3359
- 2314 E10 3361
- 2315 F6 3362
- 2317 A8 3364
- 2319 A8 3365
- 2322 D15 3366
- 2324 E23 3367
- 2326 E24 3370
- 2327 E24 3371
- 2328 A7 3372
- 2331 B16 3373
- 2333 C13 3374
- 2334 D13 3375
- 2335 E13 3376
- 2336 E16 3377
- 2337 B6 3378
- 2338 A17 3379
- 2339 C17 3381
- 2340 E17 3382
- 2342 B17 3383
- 2343 D17 3384
- 2344 F17 3385
- 2346 A6 3386
- 2351 C7 3387
- 2352 D6 3388
- 2353 D7 3391
- 2391 F25 3392
- 2401 N6 3393
- 2402 L3 3401
- 2404 H3 3402
- 2405 M6 3403
- 2406 K8 3404
- 2407 M2 3405
- 2408 I15 3406
- 2409 I11 3407
- 2410 H14 3408
- 2411 I10 3409
- 2412 H14 3410
- 2413 H13 3411
- 2414 I17 3412
- 2415 G18 3413
- 2416 H18 3414
- 2417 G17 3415
- 2418 I19 3416
- 2419 I20 3417
- 2421 I23 3418
- 2422 I22 3419
- 2423 I23 3420
- 2424 J23 3421
- 2427 L28 3422
- 2428 M28 3423
- 2429 L28 3424
- 2430 J26 3425
- 2431 J24 3426
- 2432 J26 3427
- 2433 I29 3428
- 2435 M2 3429
- 2436 O3 3430
- 2438 H23 3431
- 2440 H19 3432
- 2441 N18 3433
- 2442 N20 3434
- 2483 N19 3435
- 2501 H6 3436
- 2502 J10 3437
- 2503 K10 3438
- 2504 I24 3439
- 2505 N2 3440
- 2506 N2 3442
- 2507 L13 3443
- 2508 K13 3444
- 2509 L11 3445
- 2511 L15 3446
- 2512 L15 3447
- 2514 L17 3448
- 2515 L20 3449
- 2516 K20 3450
- 2517 O2 3451
- 2518 K22 3452
- 2519 M11 3453
- 2521 L22 3454
- 2522 N23 3455
- 2523 N25 3456
- 2524 N26 3457
- 2528 M10 3458
- 2527 M2 3459
- 2528 M2 3460
- 2529 N10 3461
- 2531 K18 3462
- 2532 K19 3463
- 2801 I4 3464
- 2805 J6 3465
- 2808 I5 3466
- 31.5k N22 3467
- 3301 C6 3468
- 3302 D6 3469
- 3303 D7 3470
- 3304 D23 3471
- 3305 D27 3472
- 3307 B7 3473
- 3308 B7 3474
- 3309 B9 3475
- 3310 E7 3476
- 3311 D3 3477
- 3312 D3 3478
- 3313 E6 3479
- 3314 D8 3480
- 3315 D7 3481
- 3316 E7 3482
- 3318 E27 3483
- 3319 B12 3484
- 3320 E8 3485
- 3321 B12 3486
- 3322 C12 3487
- 3323 C12 3488
- 3324 C12 3489
- 3325 C12 3490
- 3326 D12 3491
- 3327 D12 3492
- 3328 E12 3493
- 3329 A7 3494
- 3330 E9 3495
- 3331 E12 3496
- 3332 F12 3497
- 3333 F21 3498
- 3334 F22 3499
- 3335 E22 3500
- 3336 E23 3501
- 3337 E24 3502
- 3338 F25 3503
- 3339 E23 3504

Electrical diagrams and P.C.B. lay-outs

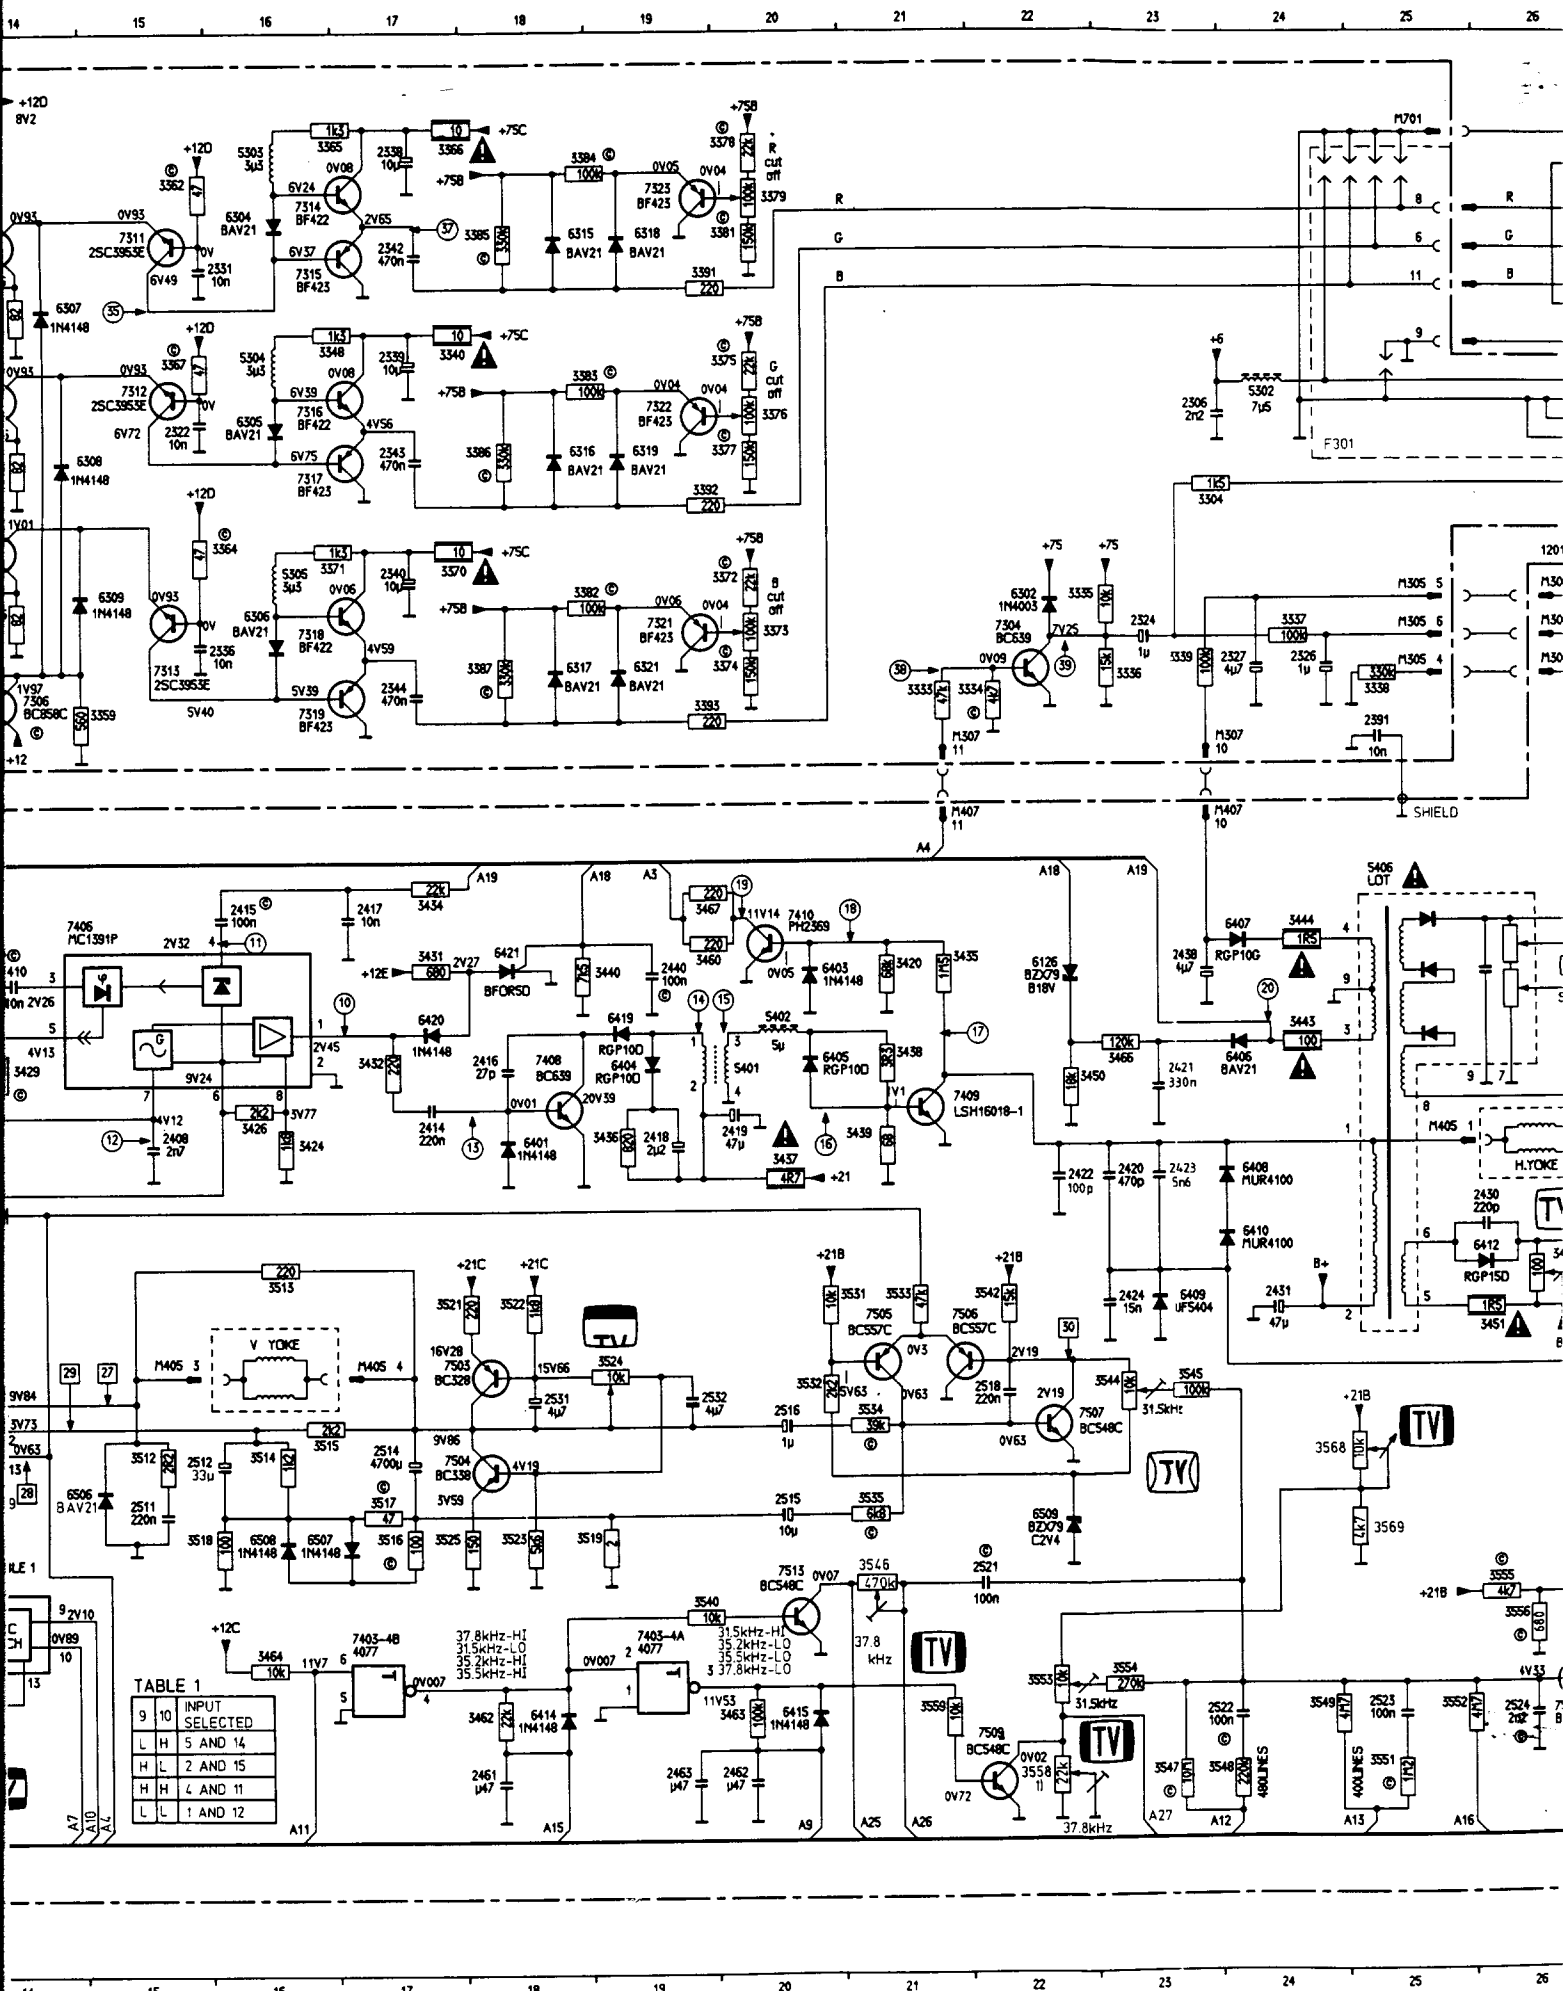


TABLE 1

9	10	INPUT SELECTED
L	H	5 AND 14
H	L	2 AND 15
H	H	4 AND 11
L	L	1 AND 12

GRAM


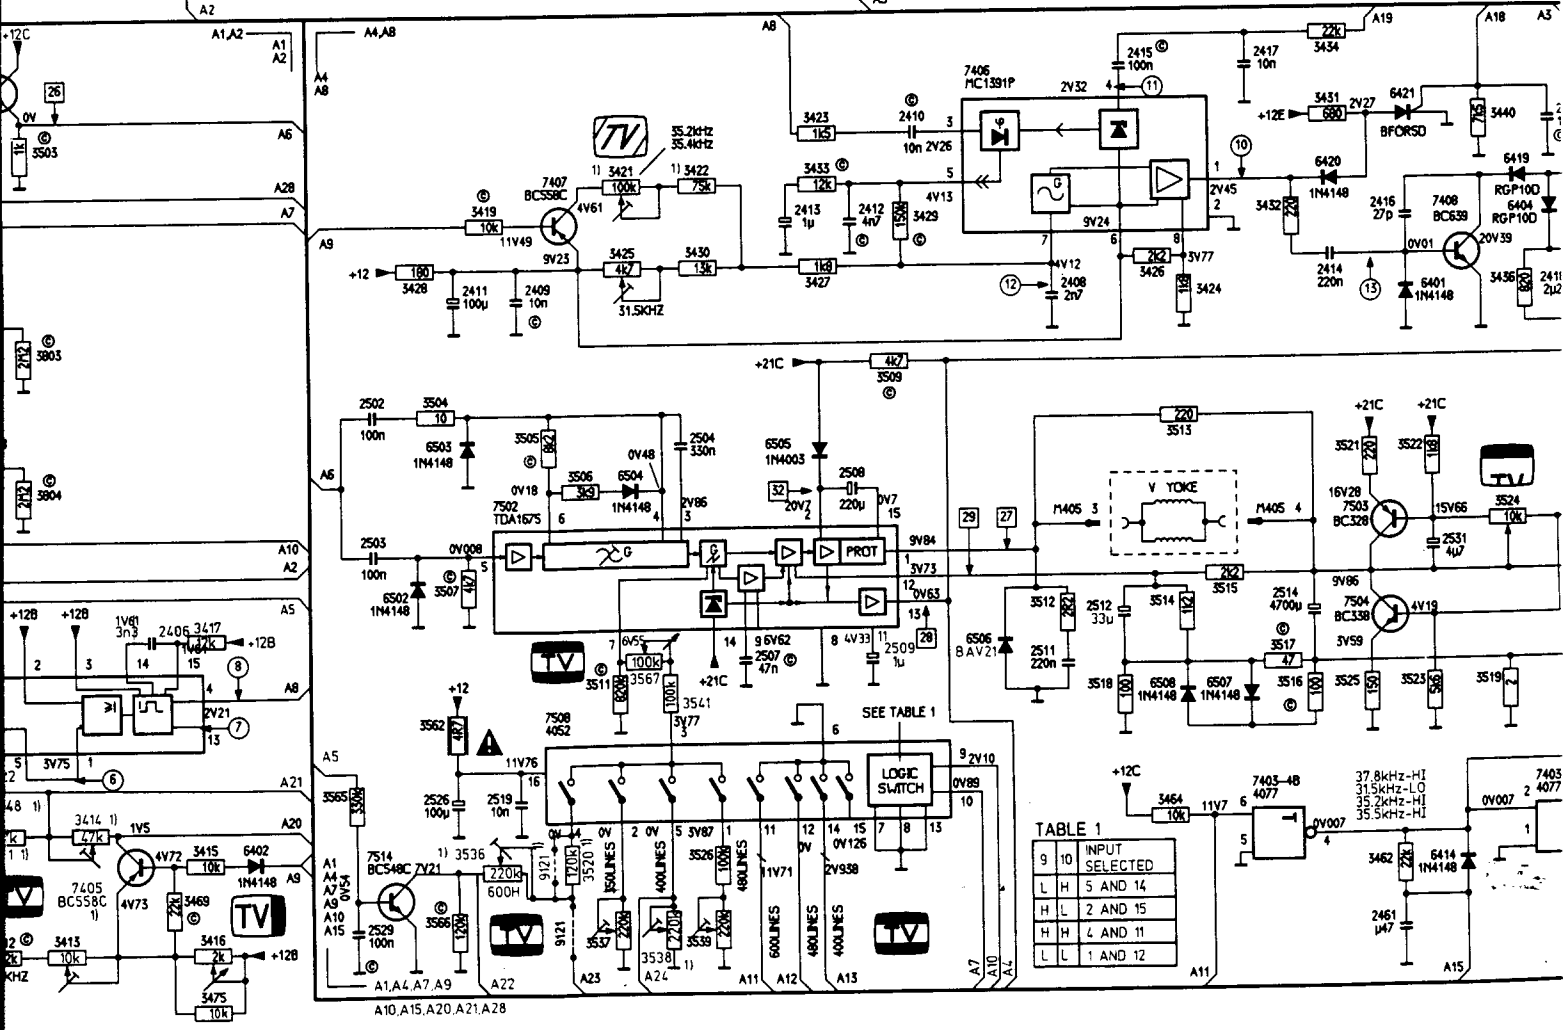


TABLE 1

9	10	INPUT SELECTED
L	H	5 AND 14
H	L	2 AND 15
H	H	4 AND 11
L	L	1 AND 12

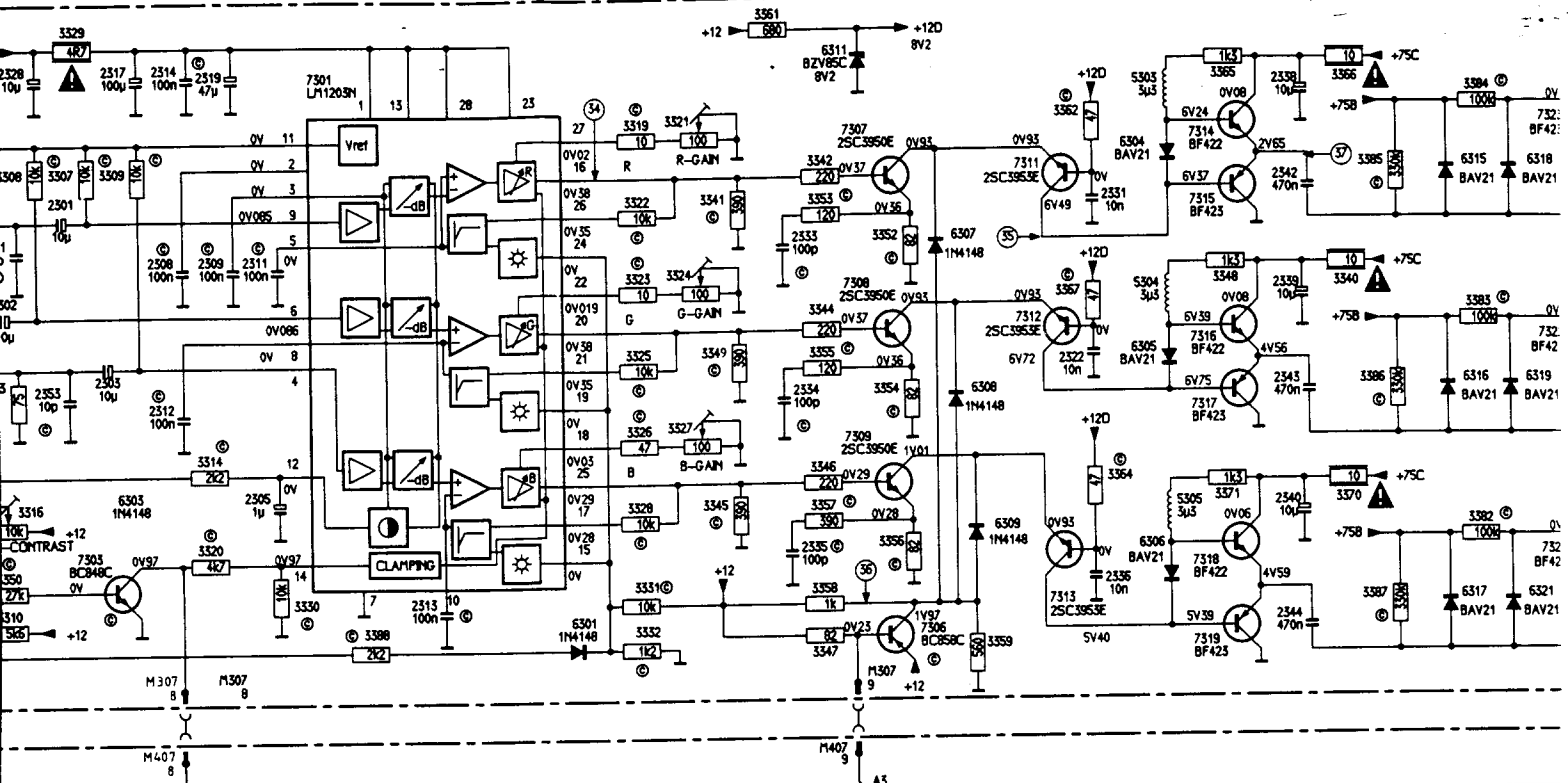